

Figure 1

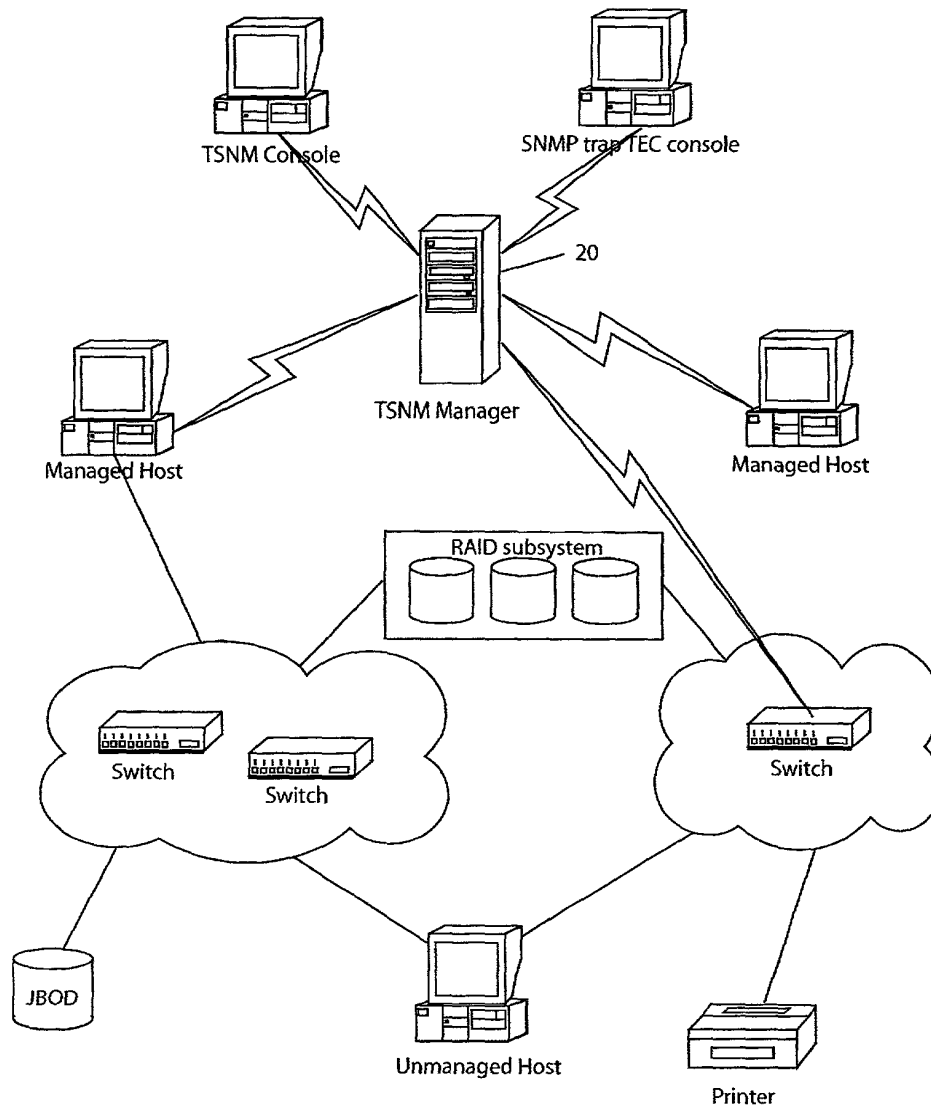 


Figure 2

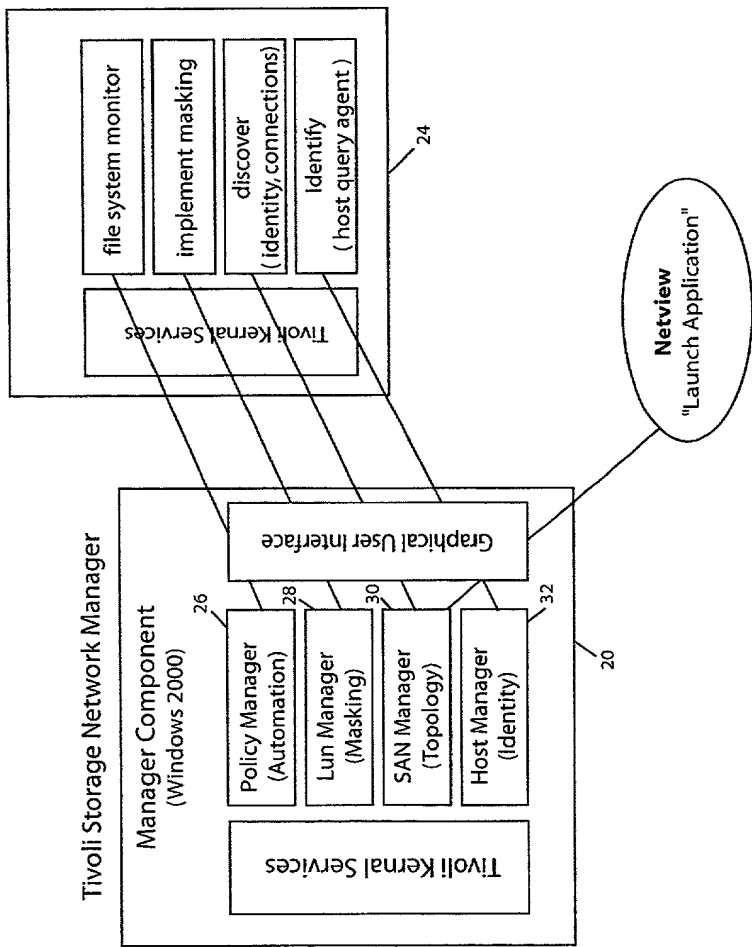 


Figure 3

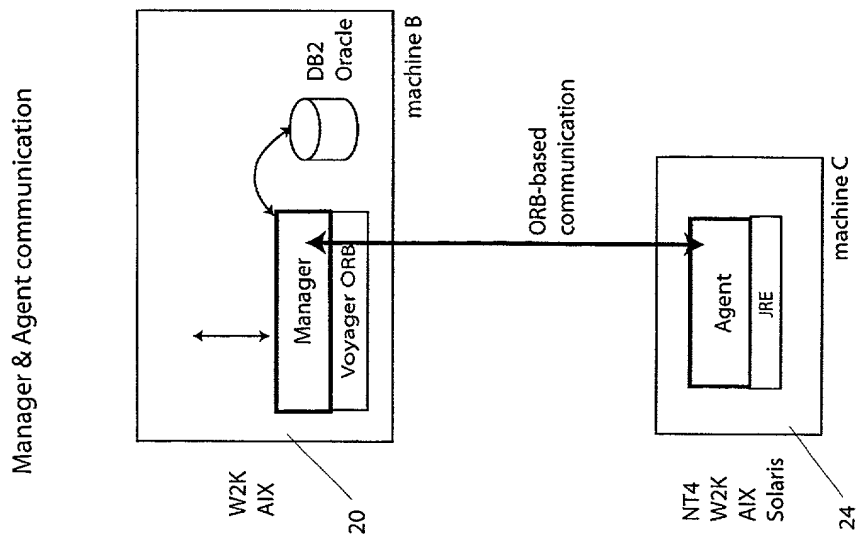 


Figure 4

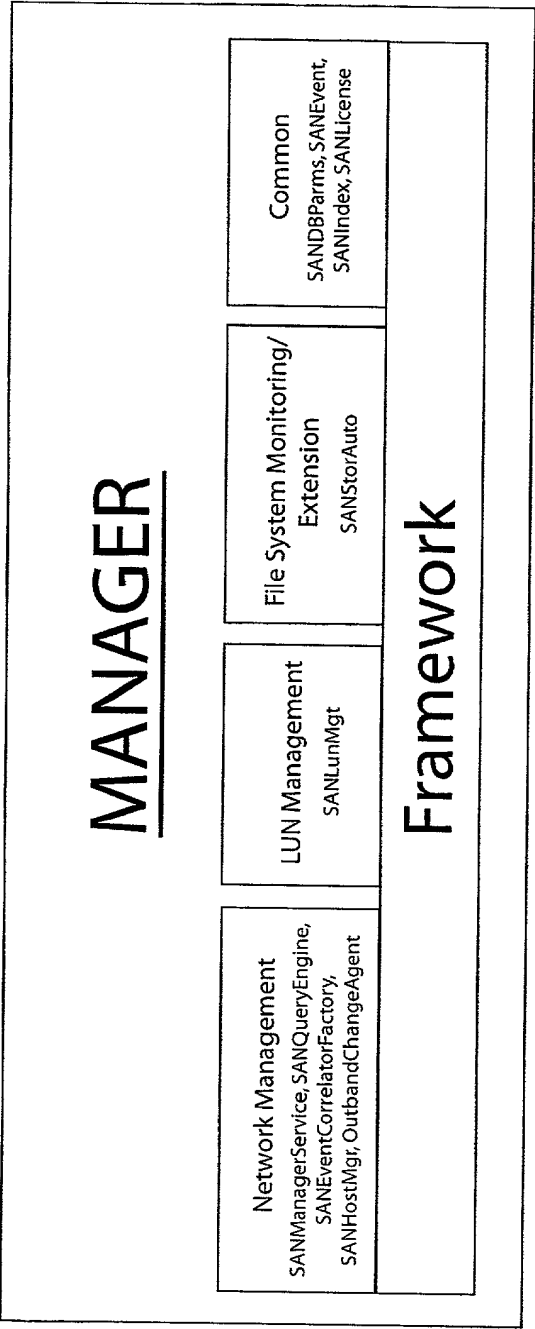 


Figure 5

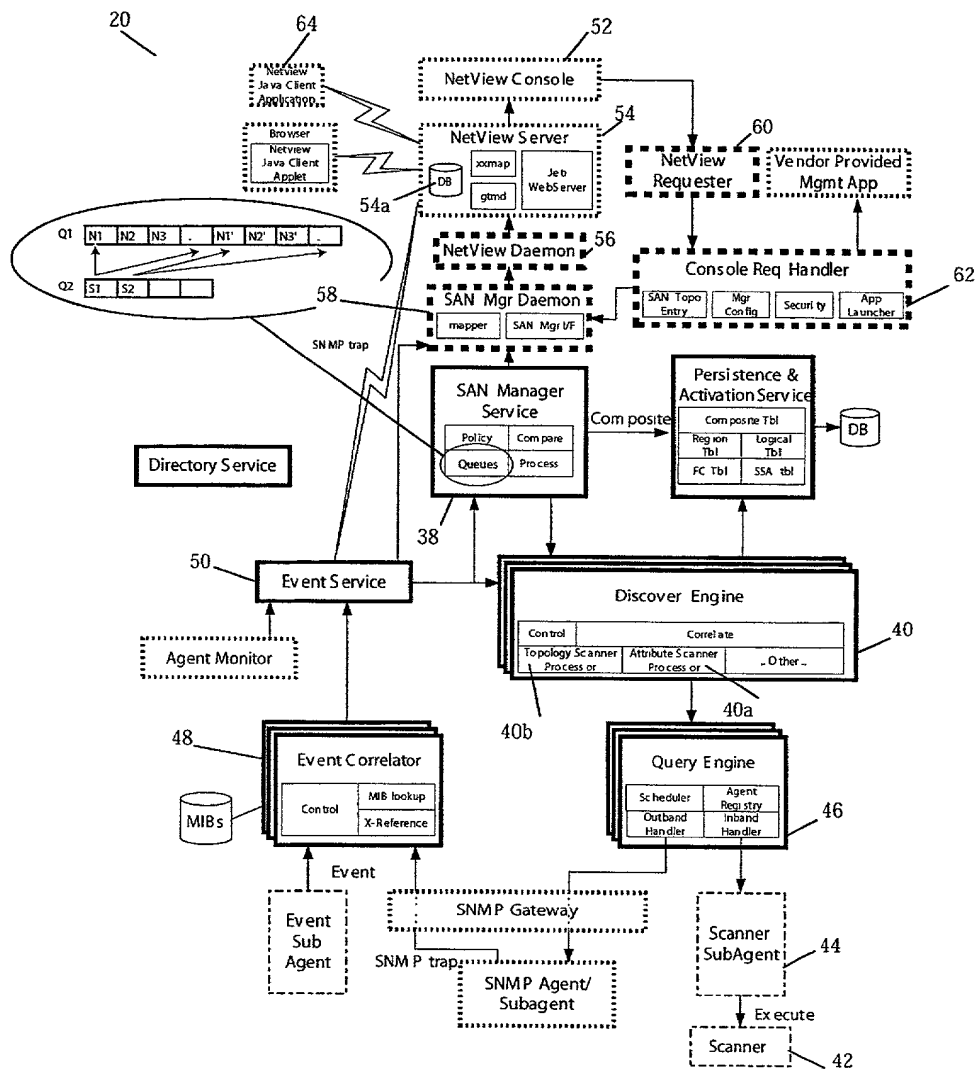 


Figure 6

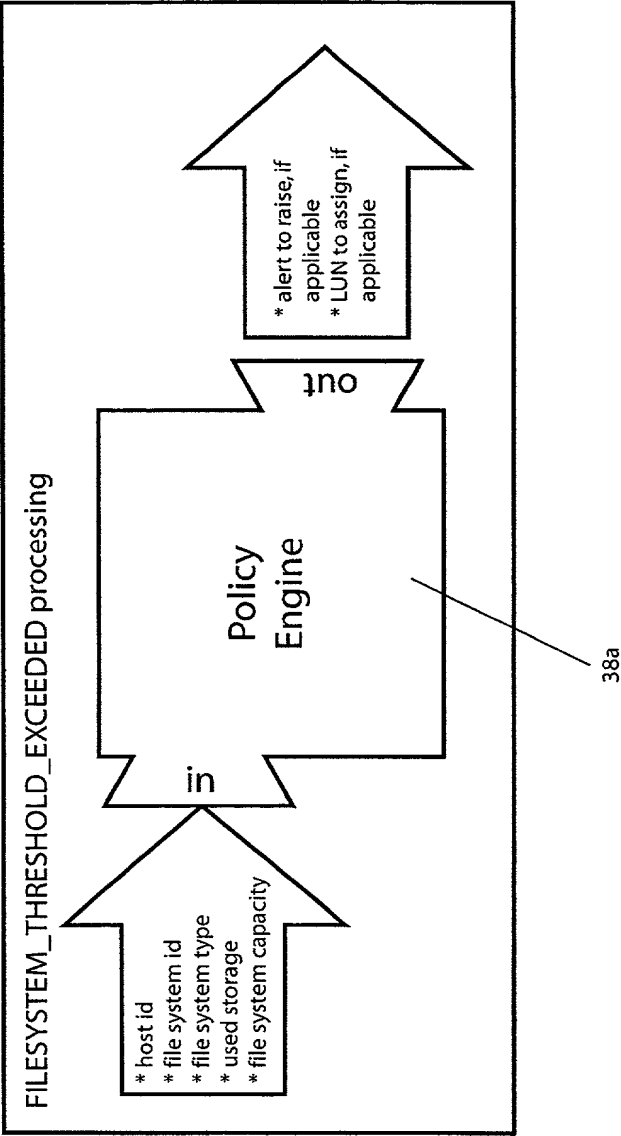 


Figure 7A

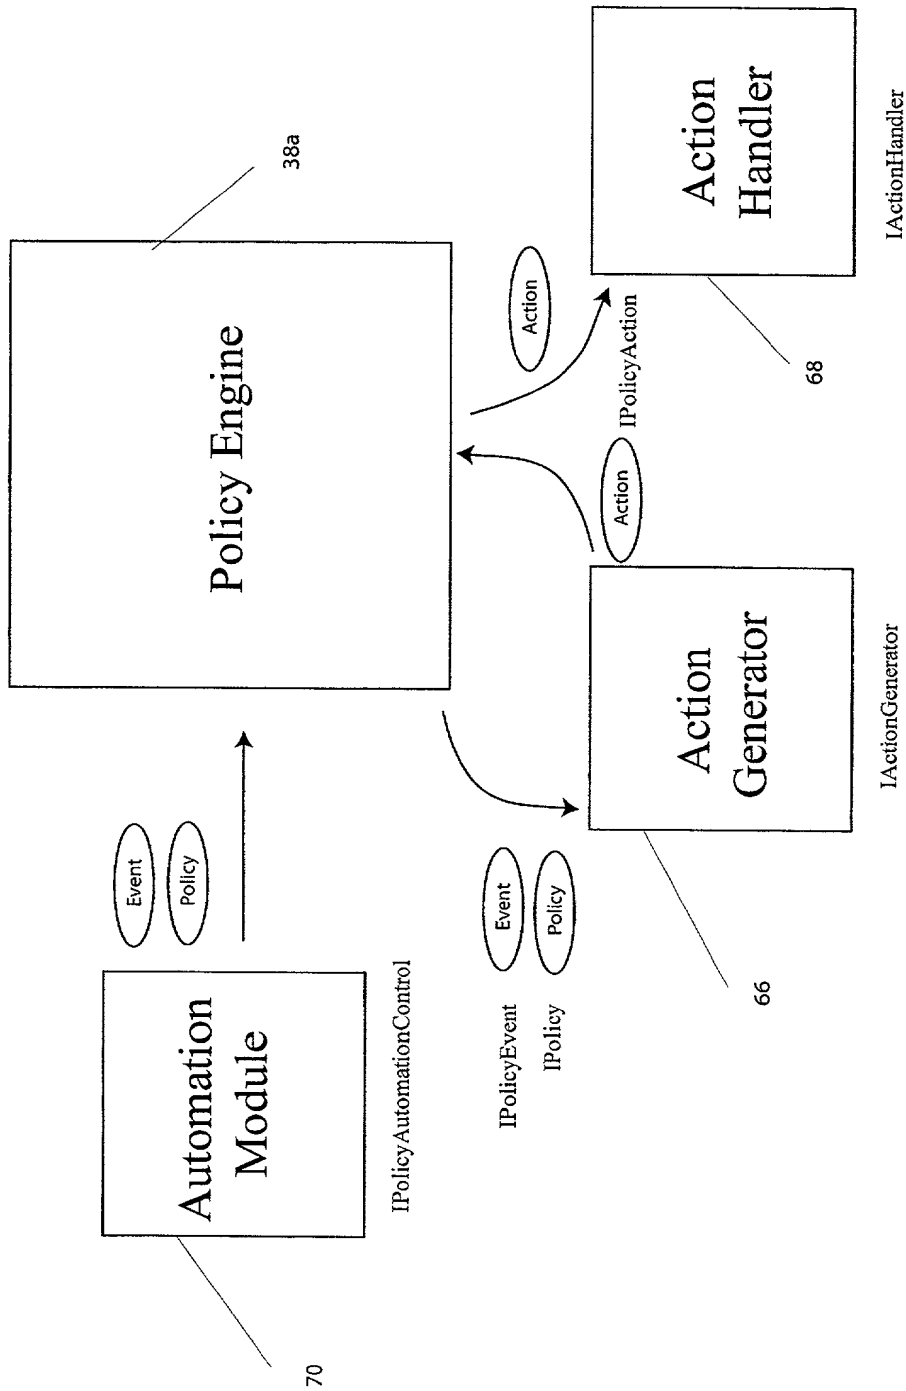 


Figure 7B

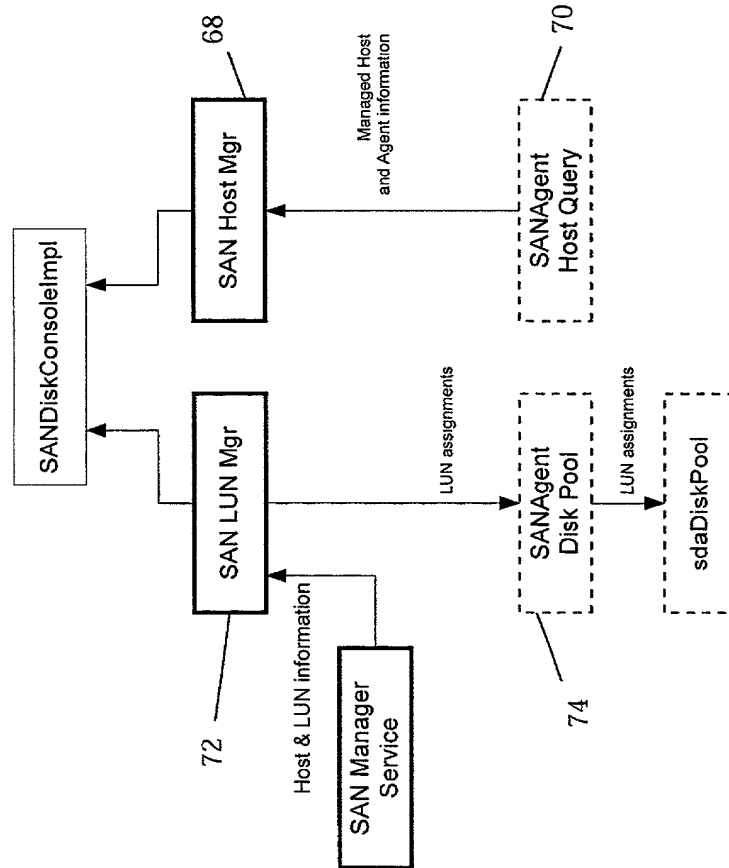 


Figure 8

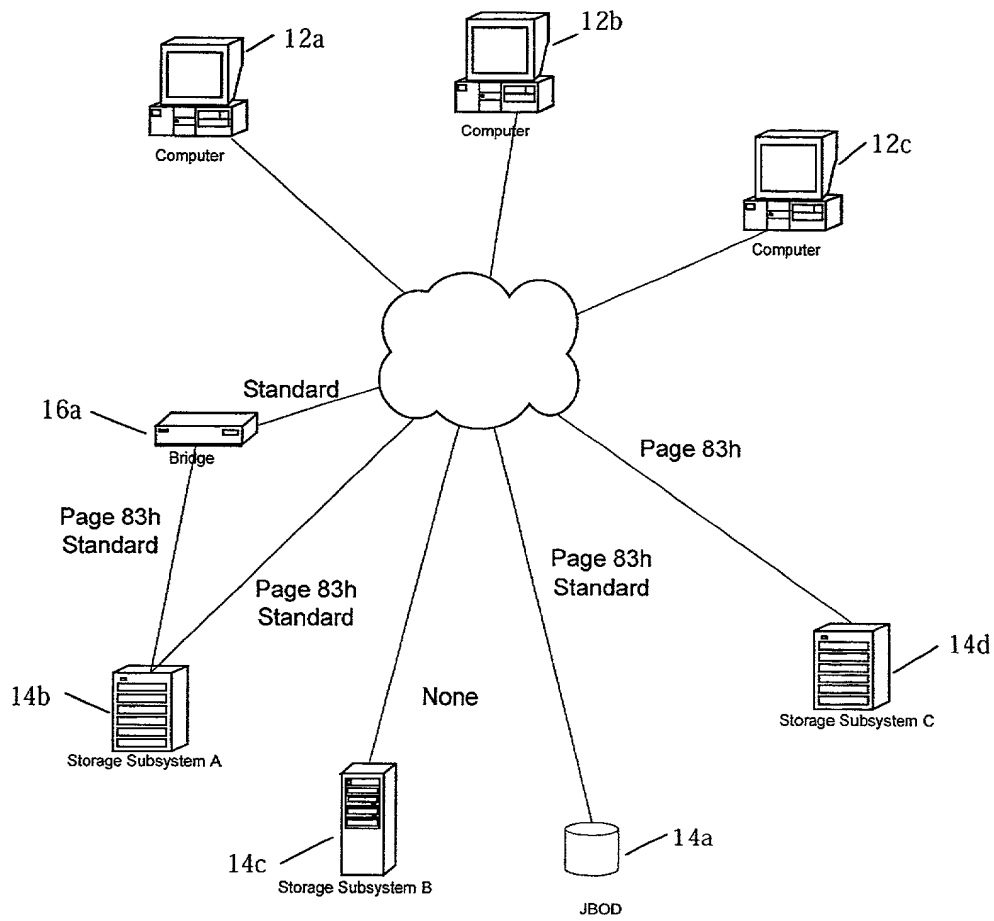 
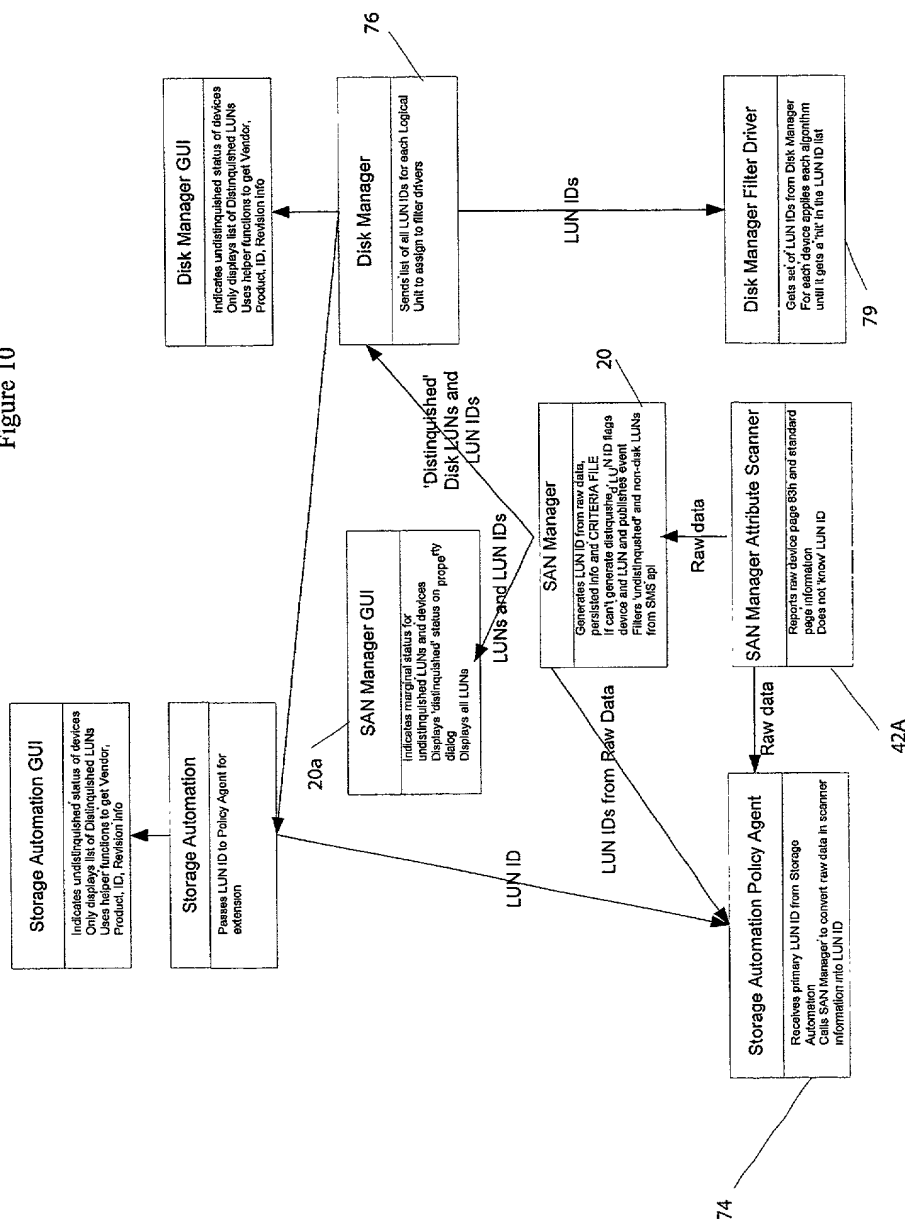 


Figure 9

Figure 10



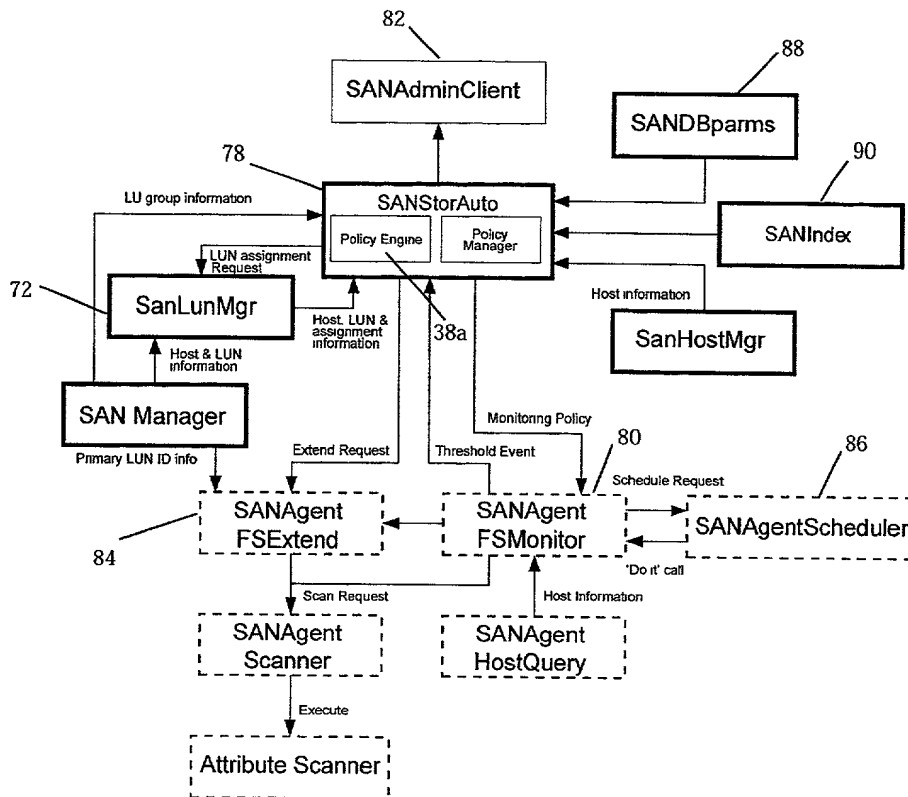 


Figure 11

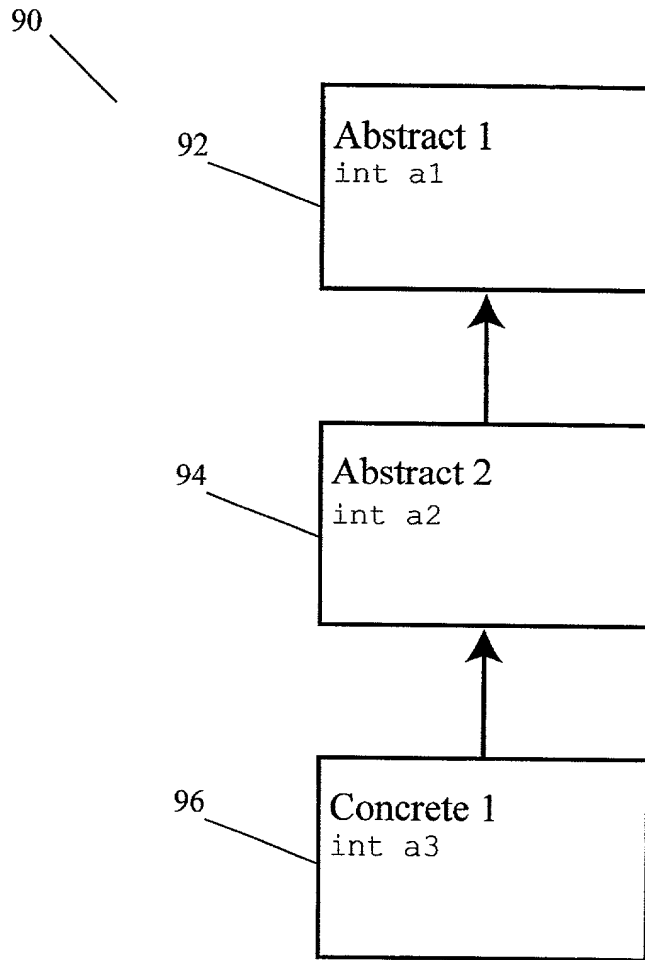 


Figure 12

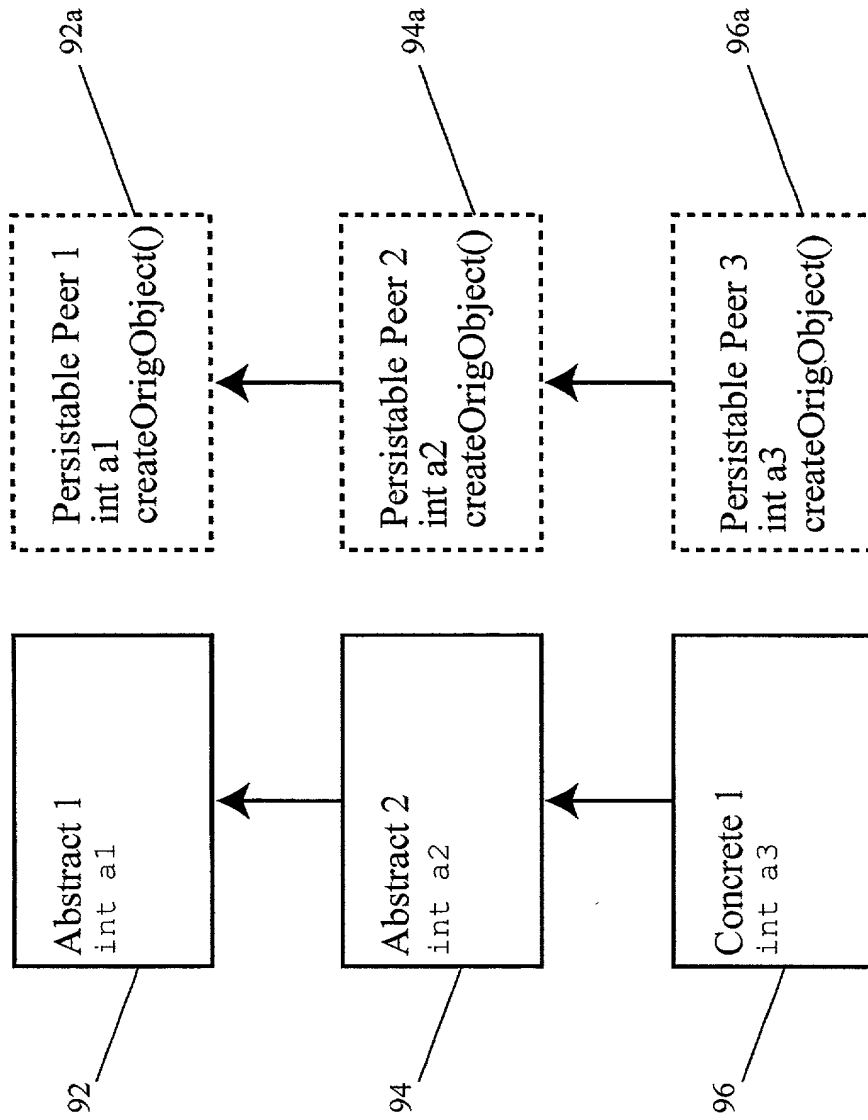 


Figure 13

Figure 14a

Figure 14b

Figure 14c

Figure 14d

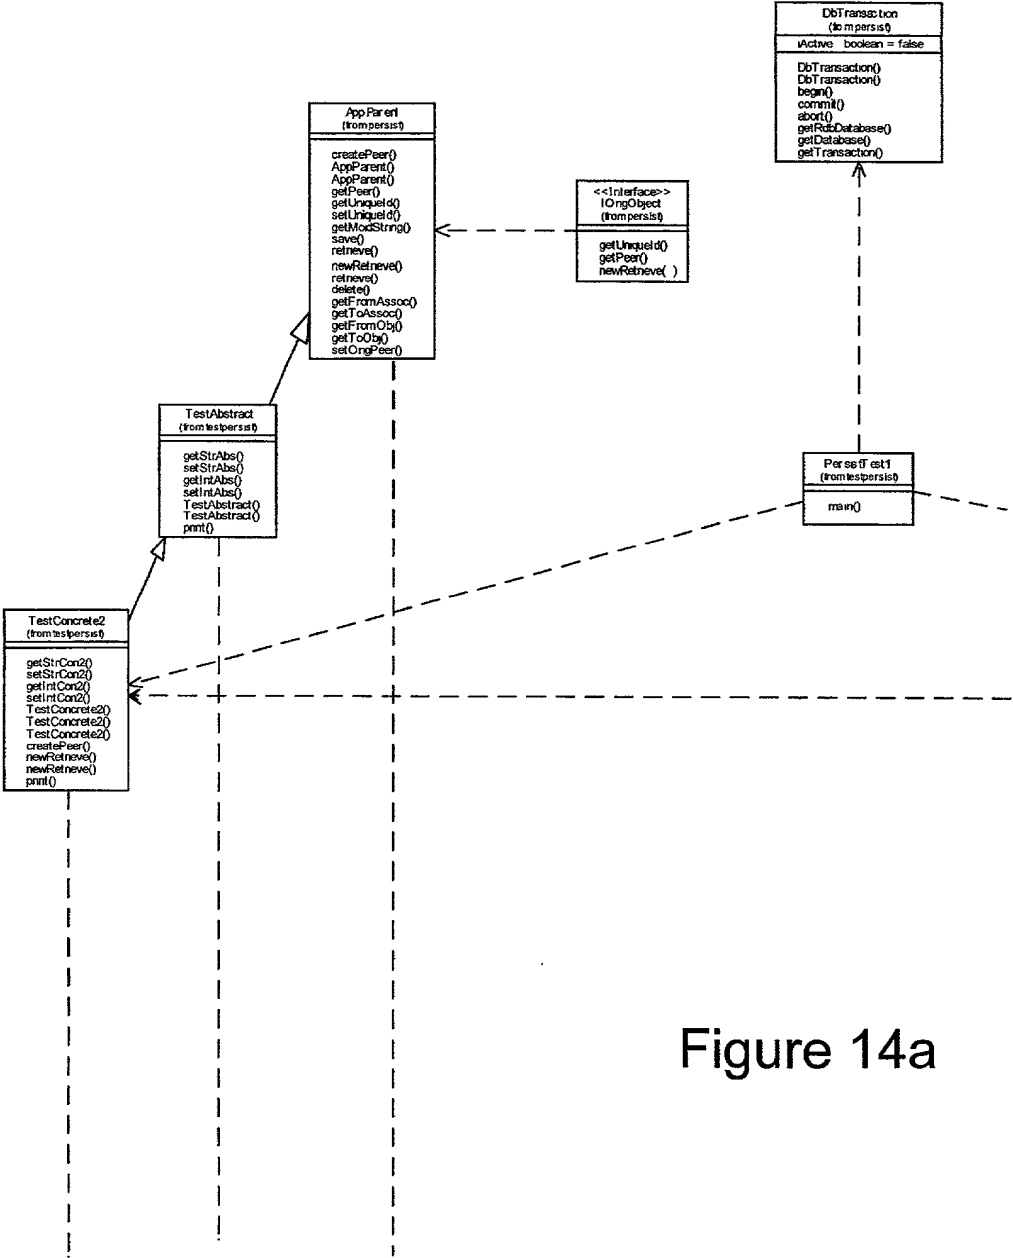 


Figure 14a

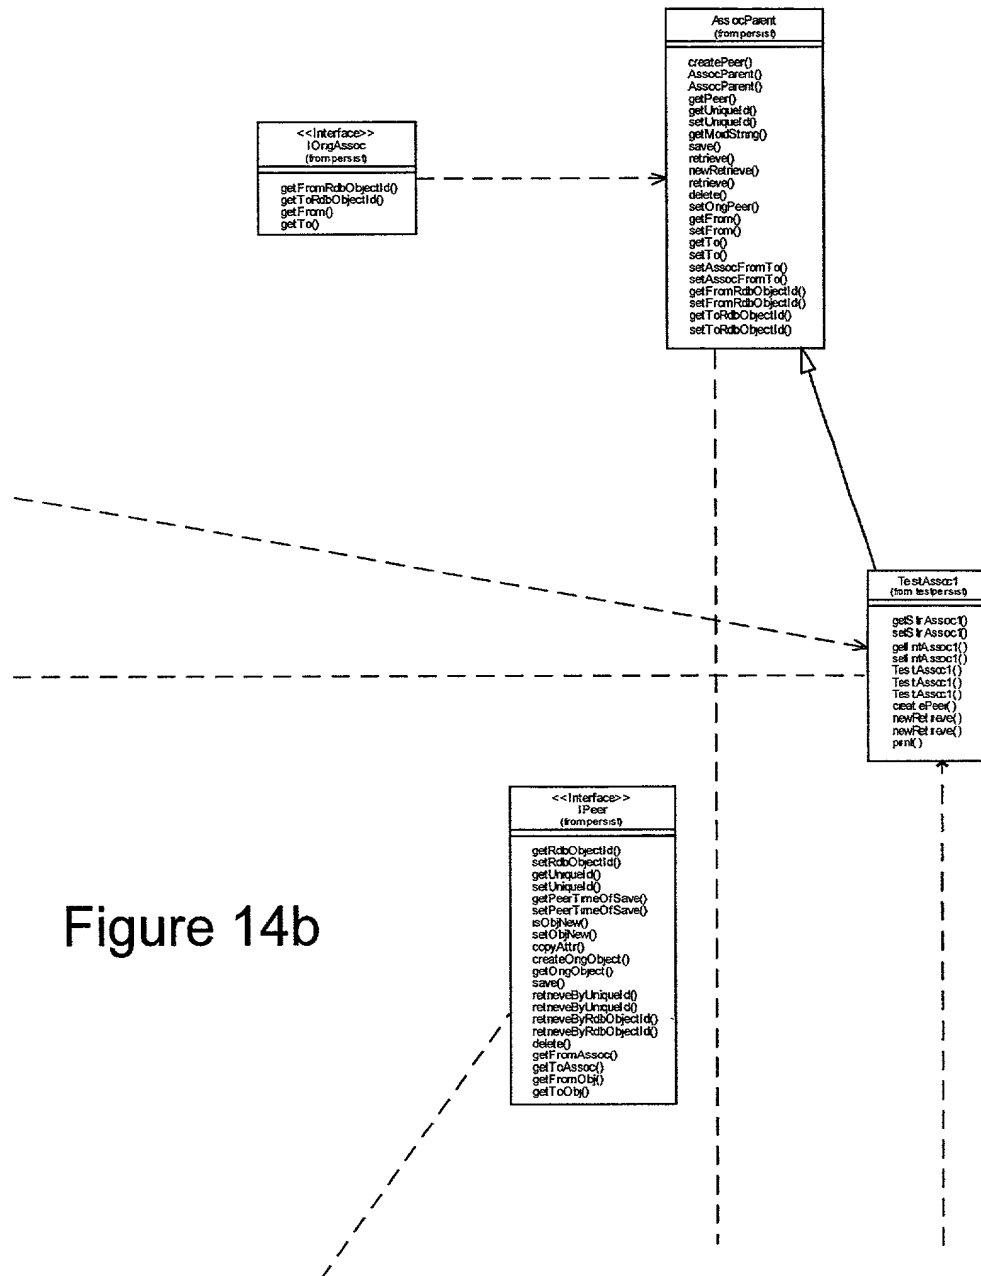 


Figure 14b

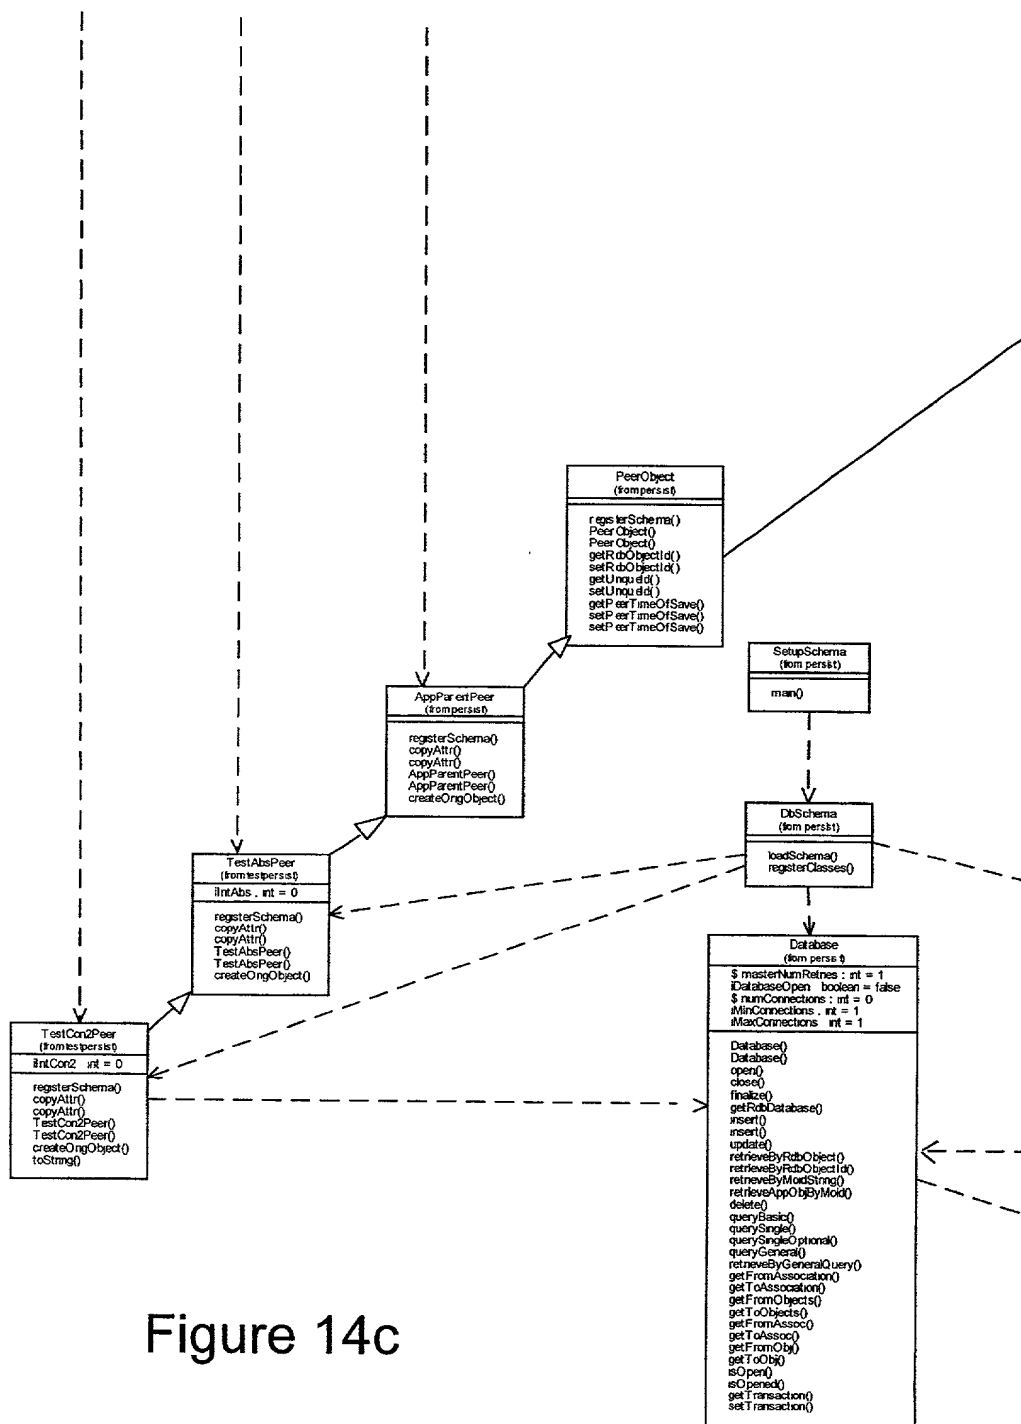 


Figure 14c

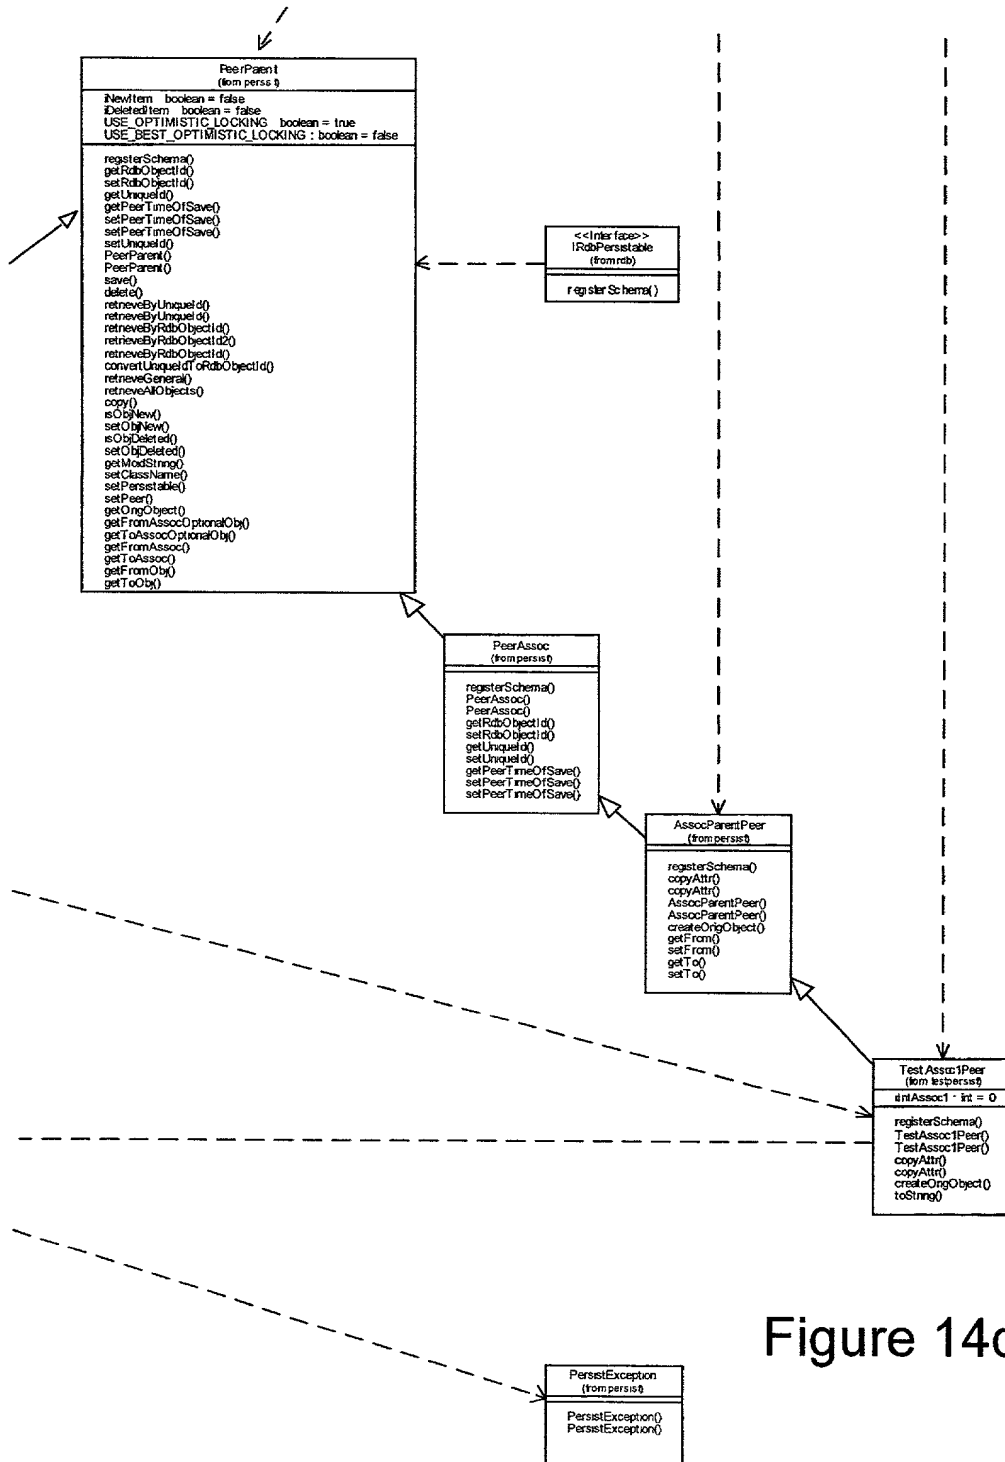 


Figure 14d

GUI (server) & Manager communication

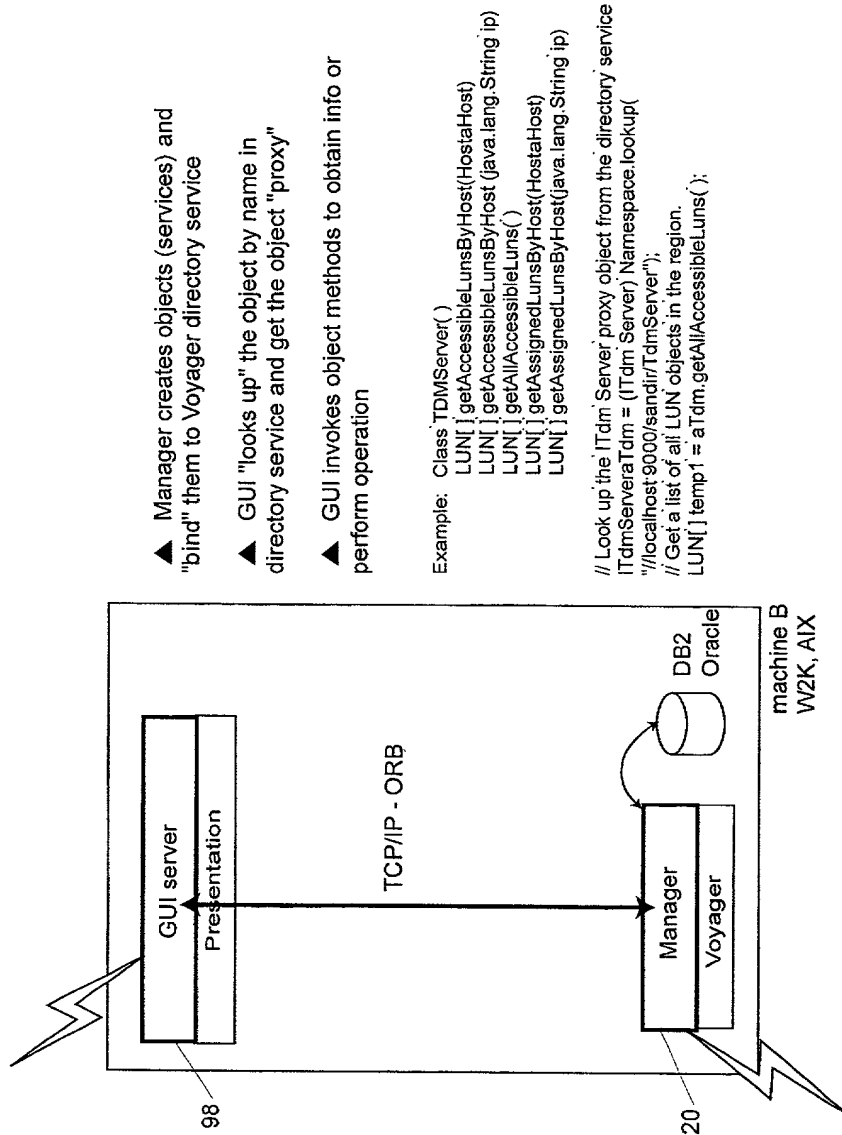 


Figure 15

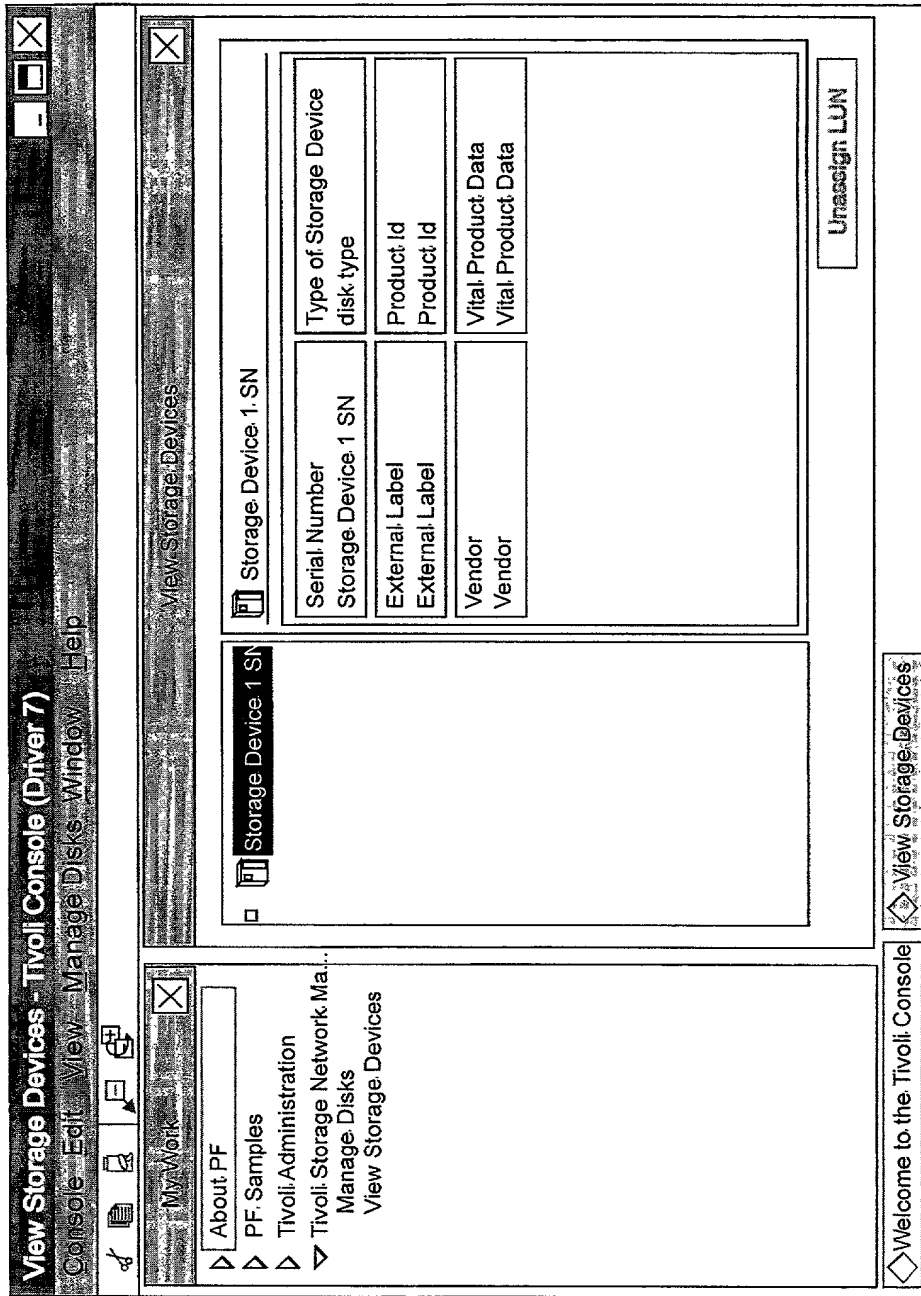 


Figure 16

100

102

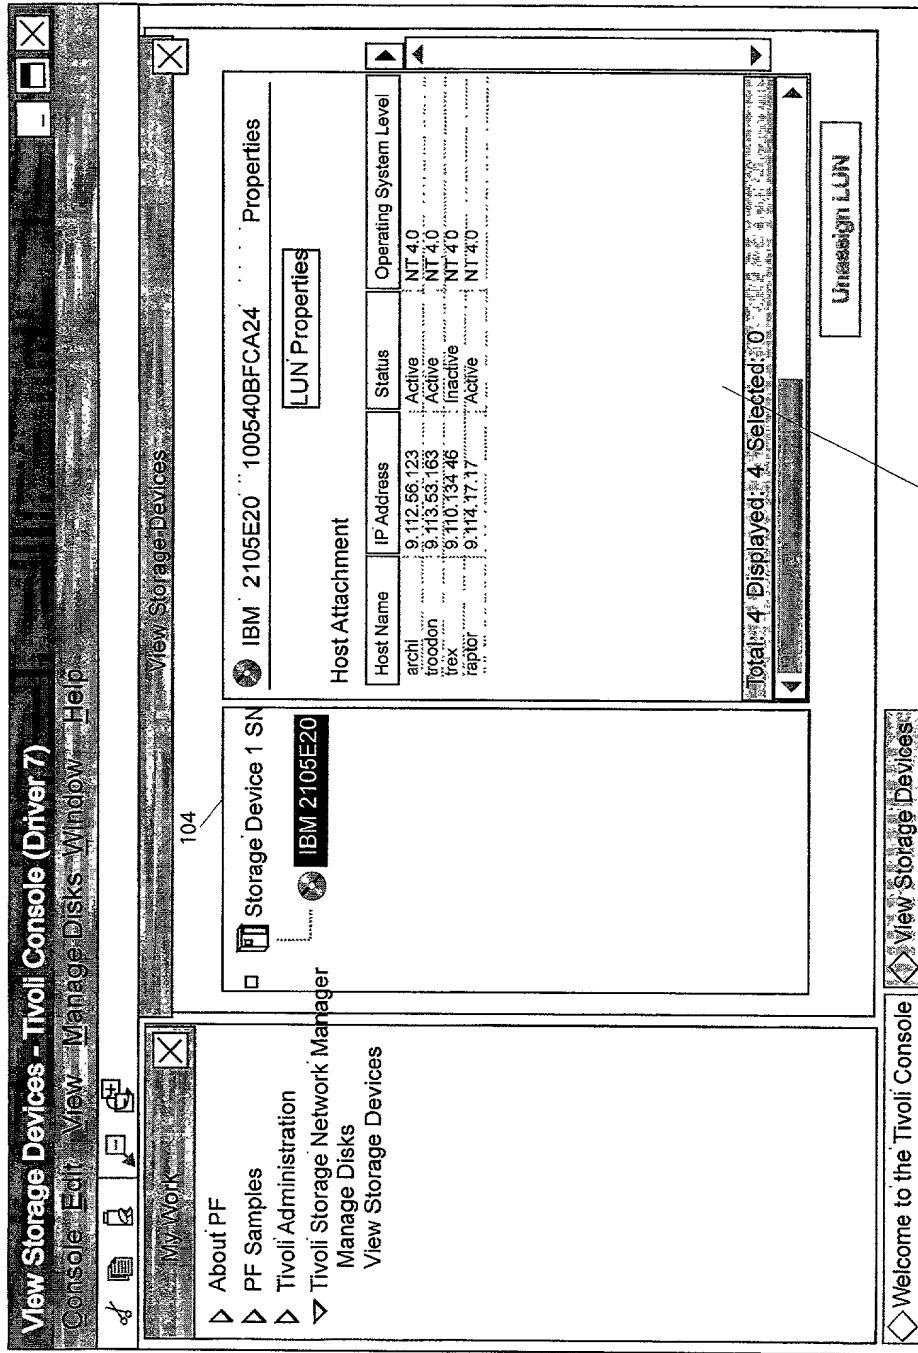 


Figure 17

106

108

Manage Disks - Tivoli Console (Driver 7)
 Console Edit View Manage Disks Window Help

archi troodon trex raptor

Host IP Address is 9.112.56.123

archi Properties

Accessible LUNs

| Capacity In MBs | Vendor | Product | Revision | Unit Number | Status | Assigned To |
|-----------------|---------|-------------|----------|-------------|------------|-------------|
| 4875 | UNISYS | 006073ST191 | 1901 | LAC66200 | | |
| 10500 | UNISYS | 006073ST191 | 1901 | LAD88360 | | |
| 22345 | IBM | 2105E20 | 1005 | 40BFCA20 | | |
| 22345 | IBM | 2105E20 | 1005 | 40CFCA20 | | |
| 22345 | IBM | 2105E20 | 1005 | 40BFCA34 | | |
| 22345 | IBM | 2105E20 | 1005 | 40DFCA34 | | |
| 22345 | IBM | 2105E20 | 1005 | 40BFCA25 | | |
| 22345 | IBM | 2105E20 | 1005 | 40CFCA25 | | |
| 8520 | EMC | SYMMETRIX | 5265 | 37012720Z | | |
| 4875 | EMC | SYMMETRIX | 5265 | 37028120Z | | |
| 4875 | SEAGATE | ST197FC | CC96 | LAM14620 | | |
| 4875 | UNISYS | 39.BYTESLO | 901L | AC66203 | Assigned | |
| 10500 | UNISYS | 39.BYTESLO | 1901 | 7 | Assigned | |
| 22345 | IBM | 2105E20 | 1005 | 40BFCA24 | Assigned | |
| 22345 | IBM | 2105E20 | 1005 | 40CFCA24 | Unassign P | |
| 8520 | EMC | SYMMETRIX | 5265 | 37012720C | Assigned | |

Total: 19 Displayed, 19 Selected, 0

Welcome to the Tivoli Console View Storage Devices Manage Disks

Assign LUN Unassign LUN Reassign LUN

112a

112b

112c

112d

110

Figure 18

114

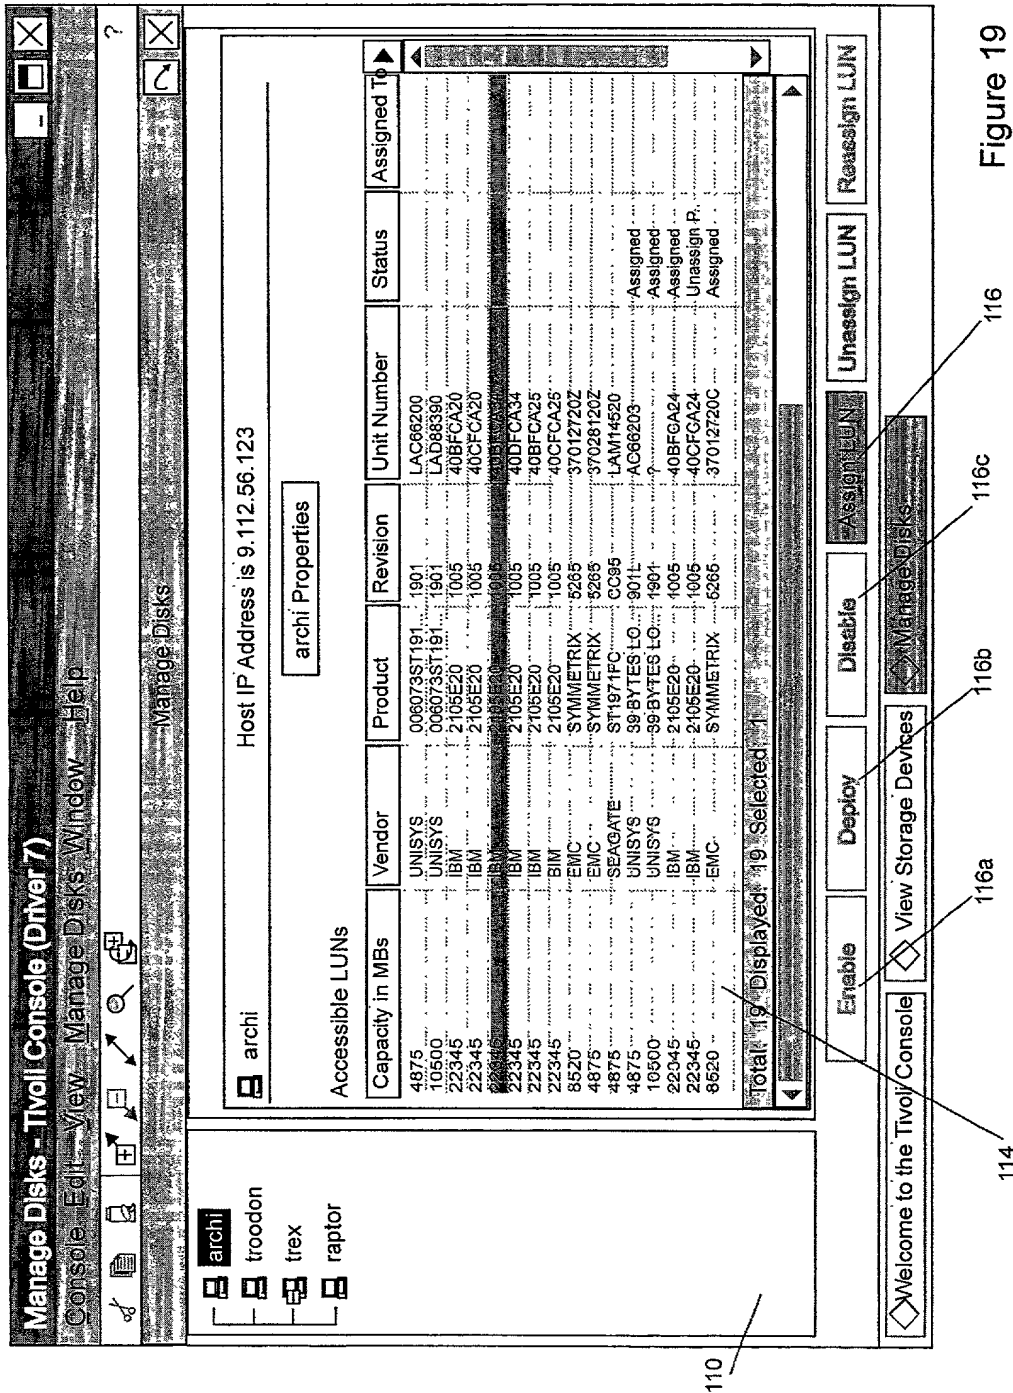 


Figure 19

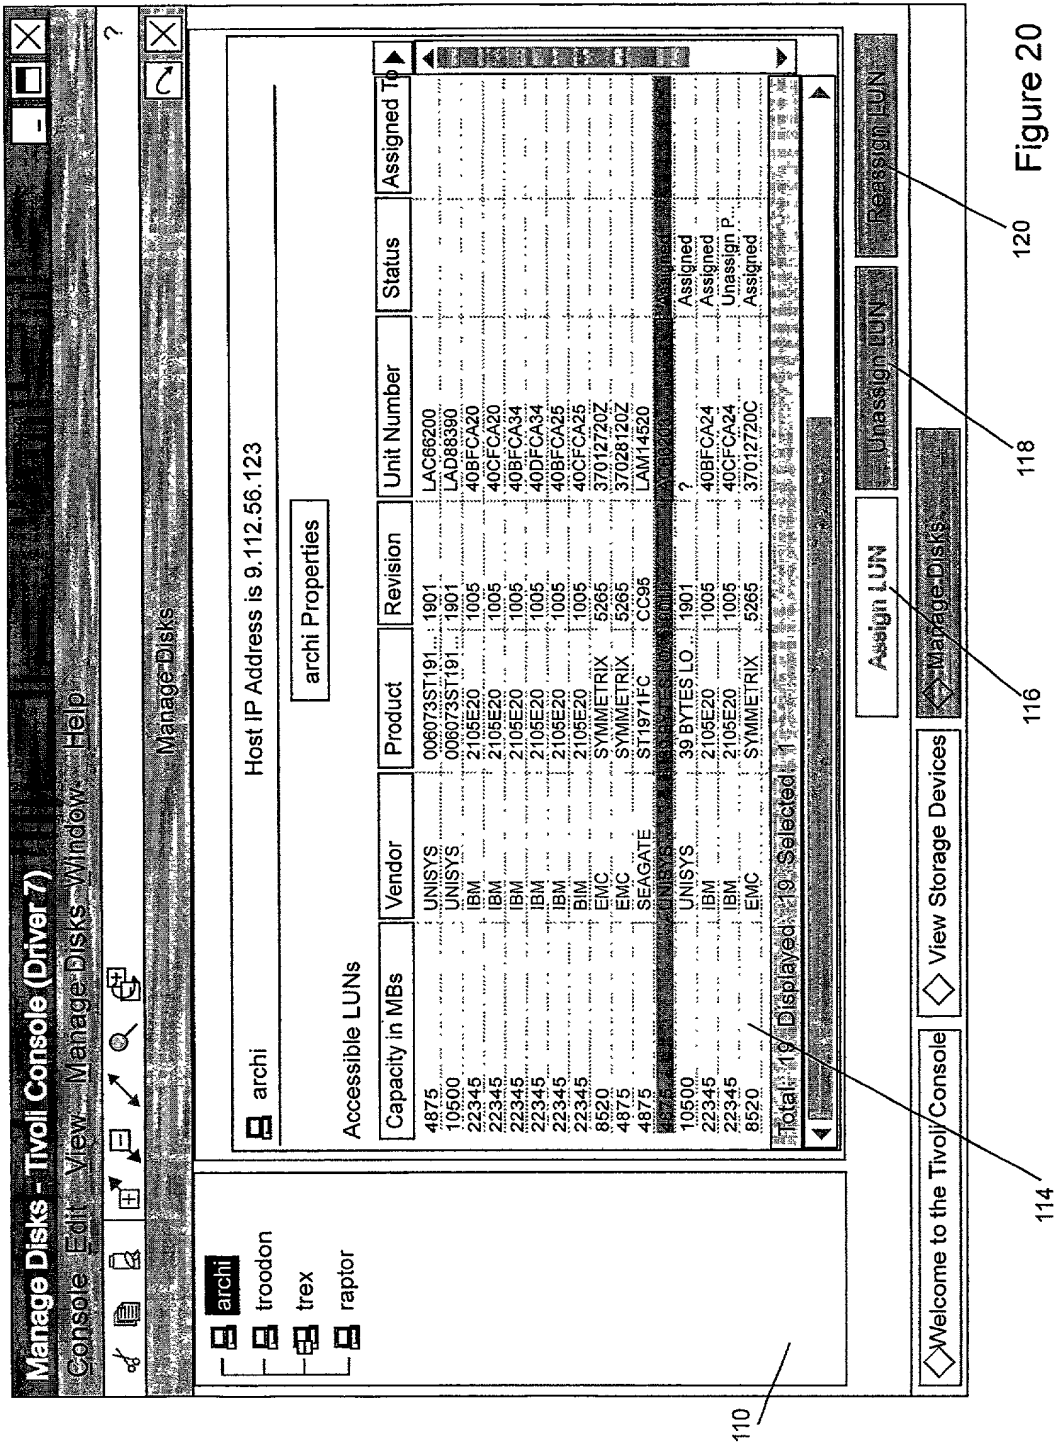 


Figure 20

Clearing the Filter

Manage Disks - Tivoli Console (Driver 7)

Console Edit View Manage Disks Window Help

Manage LUNs

Host IP Address is 9.112.56.123

Host Properties

Accessible LUNs

| Capacity in MBs | Vendor | Product | Revision | Unit Number | Status | Assigned To Other | Logical Unit |
|-----------------|--------|----------------|-----------|-------------|------------------|-------------------|--------------|
| 22,345 | IBM | 2105E20 | 1005 | 408FCA24 | Unassign Pending | <no filter> | LU group1 |
| 10,500 | UNISYS | 006073ST191 | 1901 | LAD88397 | Assigned | <no filter> | LU group1 |
| 22,345 | IBM | 2105E20 | 1005 | 408FCA24 | Assigned | <no filter> | LU group1 |
| 8,520 | EMC | SYMMETRIX 5265 | 37012720C | 37012720C | Assigned | <no filter> | LU group1 |
| 10,500 | UNISYS | 006073ST191 | 1901 | LAD88390 | Assigned | <no filter> | LU group1 |
| 22,345 | IBM | 2105E20 | 1005 | 408FCA20 | Assigned | <no filter> | LU group1 |
| 22,345 | IBM | 2105E20 | 1005 | 408FCA34 | Assigned | <no filter> | LU group1 |
| 22,345 | IBM | 2105E20 | 1005 | 408FCA34 | Assigned | <no filter> | LU group1 |
| 22,345 | IBM | 2105E20 | 1005 | 408FCA25 | Assigned | <no filter> | LU group1 |
| 22,345 | IBM | 2105E20 | 1005 | 408FCA25 | Assigned | <no filter> | LU group1 |
| 8,520 | EMC | SYMMETRIX 5265 | 37012720C | 37012720C | Assigned | <no filter> | LU group1 |

Total: 19, Displayed: 12, Selected: 0

Assign LUN **Unassign LUN** **Reassign LUN**

Welcome **Manage LUNs**

Figure 21

The screenshot displays the Tivoli Storage Manager console interface. At the top, there are several tabs: "Manage Disks - Tivoli Console (Driver ?)", "Console Edit View", "Manage Disks Window", and "Help". Below these tabs is a toolbar with icons for file operations and search.

The main window is titled "Manage LUNs". It features a sidebar on the left with a tree view containing folders like "archi", "troodon", "trex", "raptor", and "vega". The "archi" folder is selected, and its properties are displayed in the center pane.

In the center pane, under the "Host Properties" section, the "Host IP Address" is listed as "9.112.56.123". Below this, the "Accessible LUNs" section shows a table of LUNs. A pop-up dialog box is overlaid on this table, allowing selection of capacity ranges. The dialog has three options: "At least", "At most", and "OK". The "At least" option is currently selected, and the value "5000" is entered in the adjacent field.

The "Accessible LUNs" table lists various LUNs with their capacities and statuses. Some LUNs are assigned to other groups, while others are pending or unassigned. The bottom of the table shows a summary: "Total: 19 Displayed, 19 Selected".

On the right side of the "Manage LUNs" window, there are three buttons: "Assign LUN", "Unassign LUN", and "Reassign LUN".

Figure 22

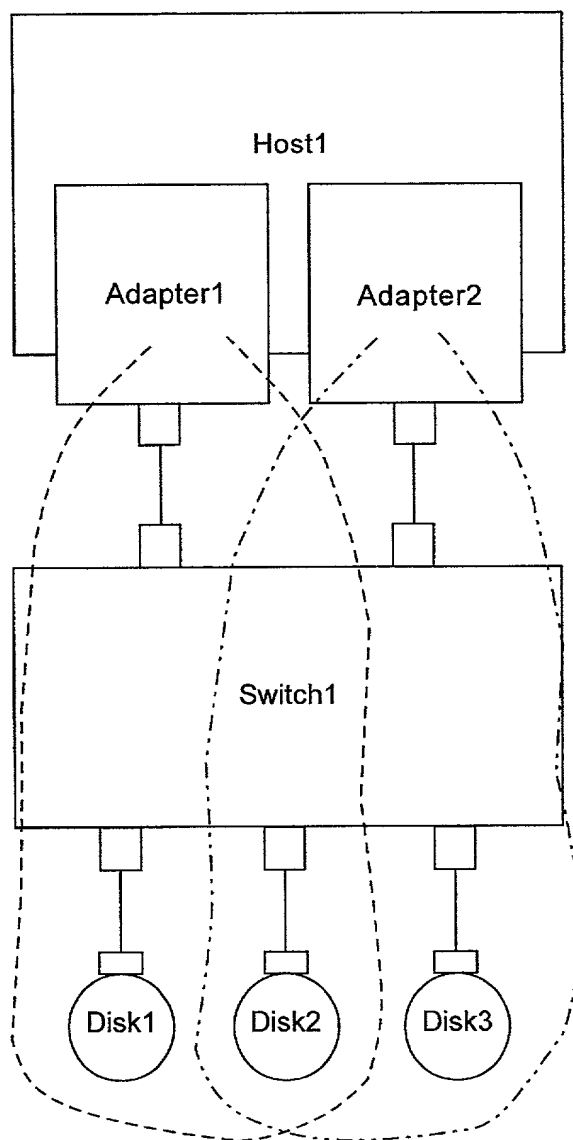 


Figure 23

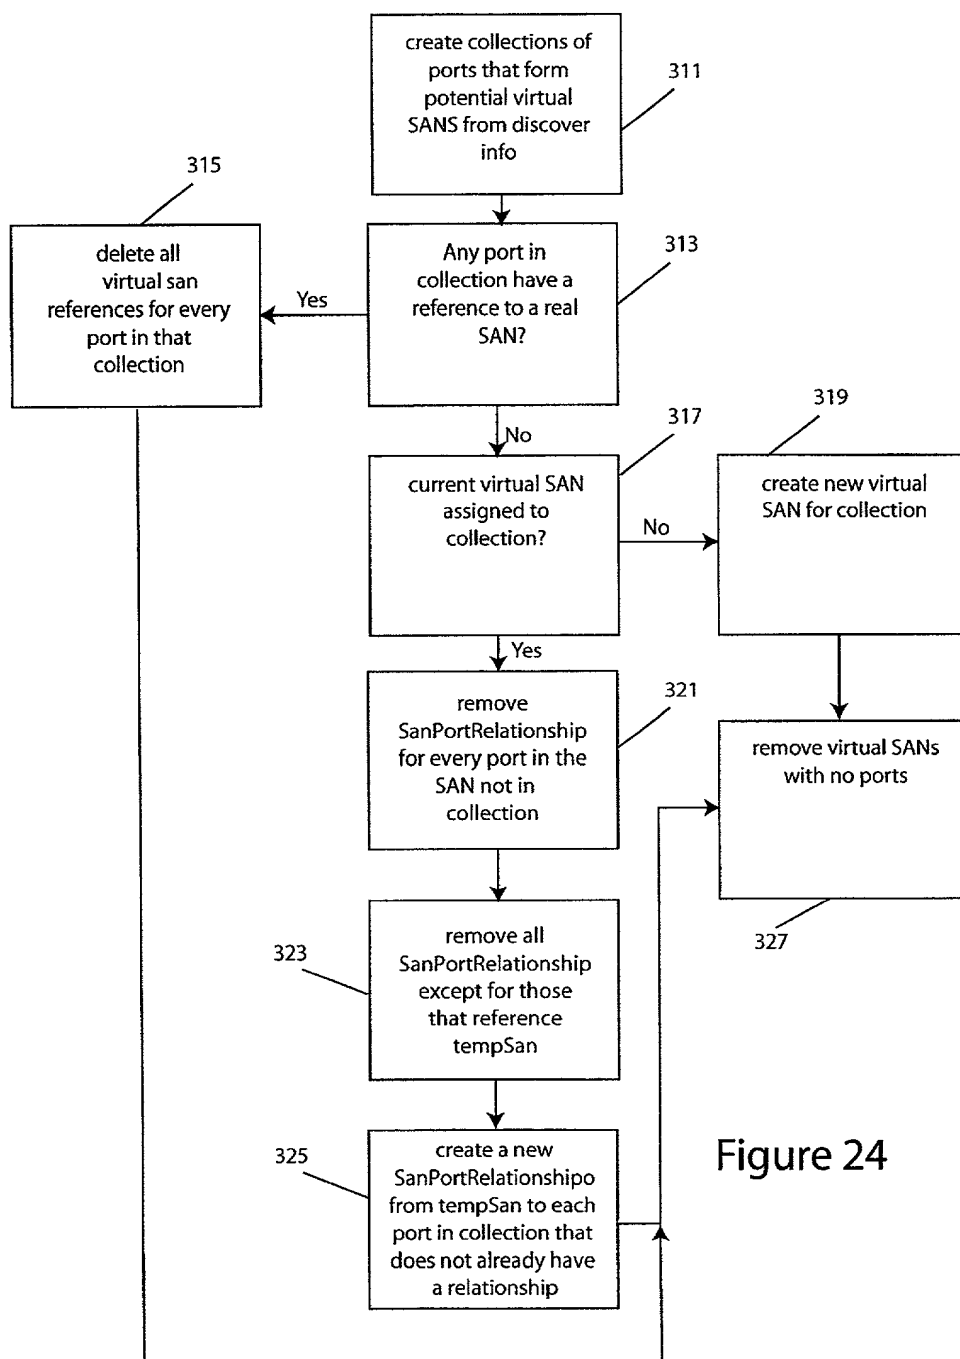 


Figure 24

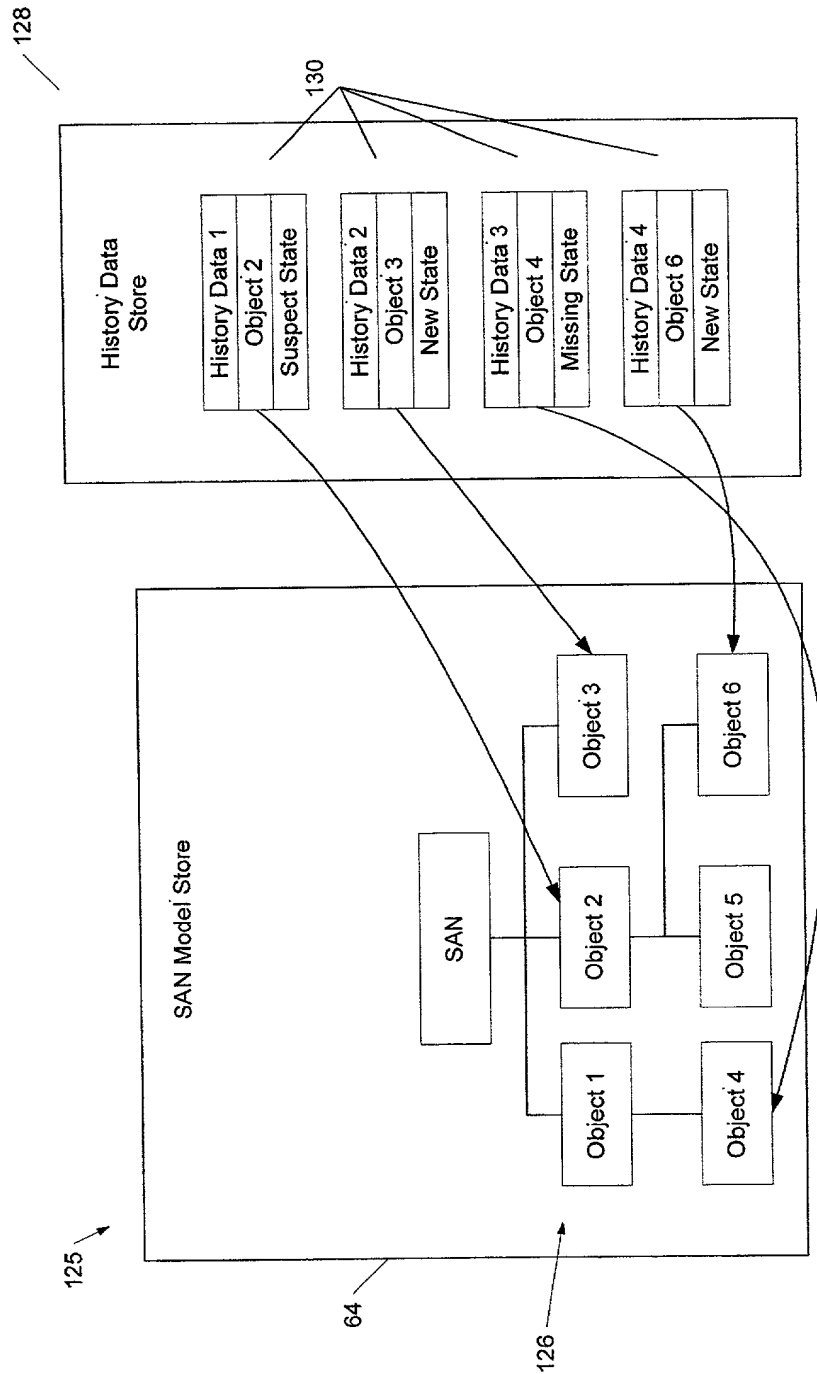 


FIGURE 25

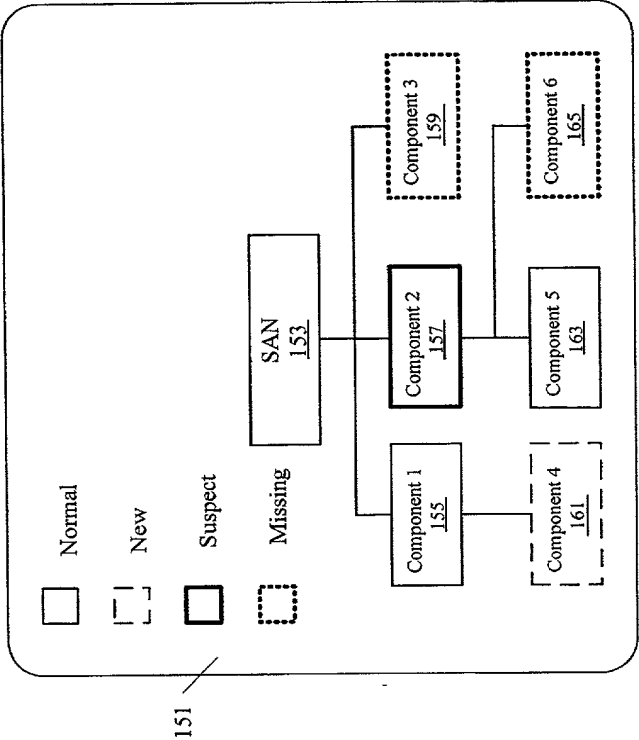 


FIGURE 26

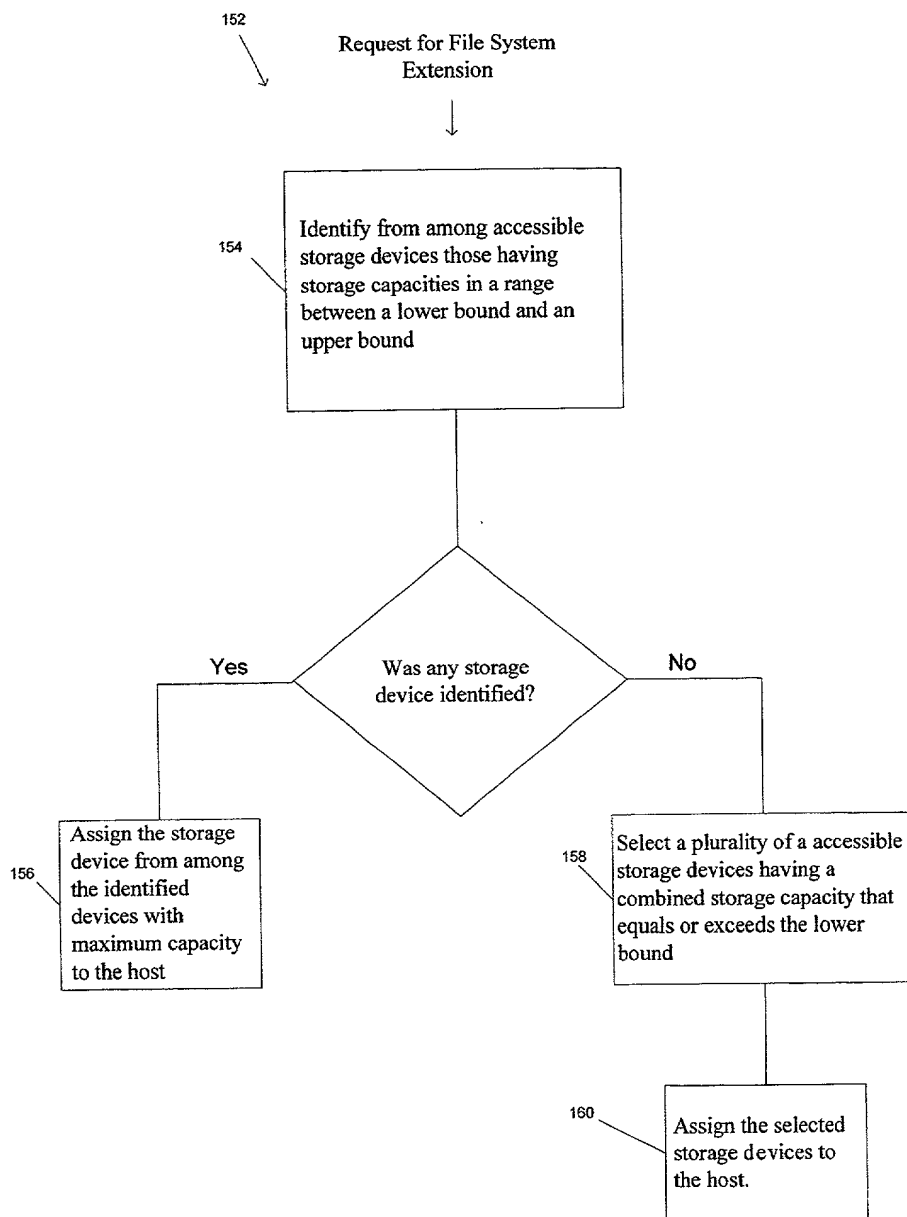 


Figure 27

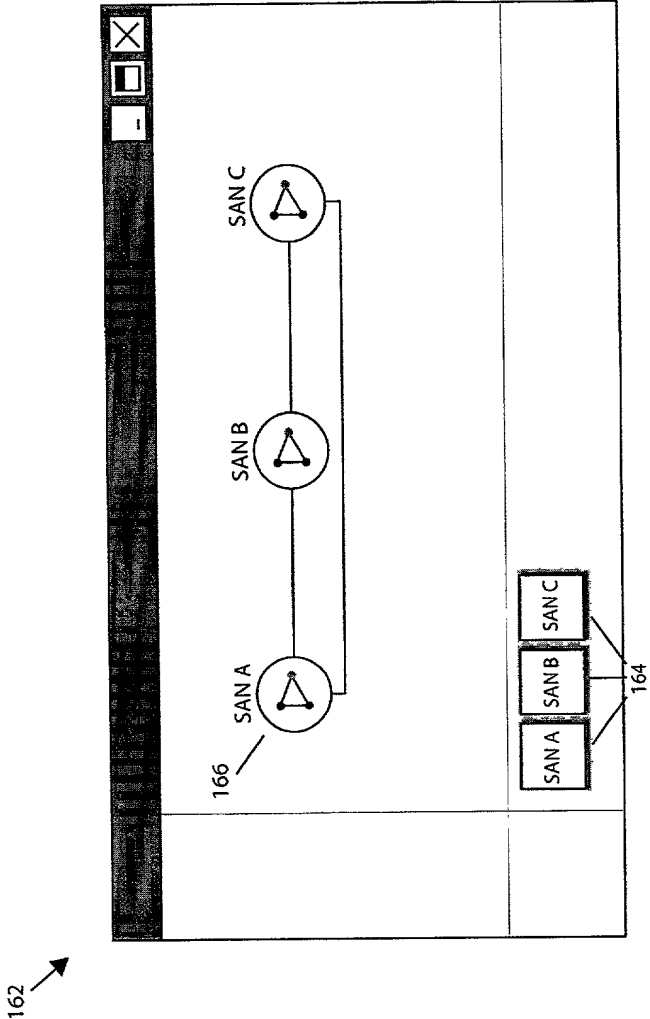 


Figure 28

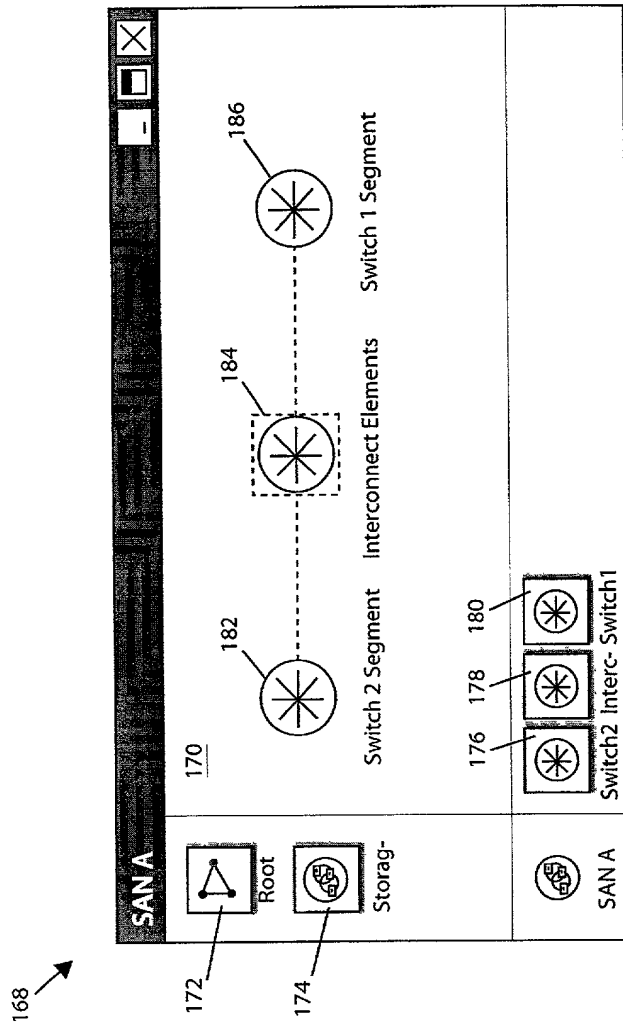 


Figure 29

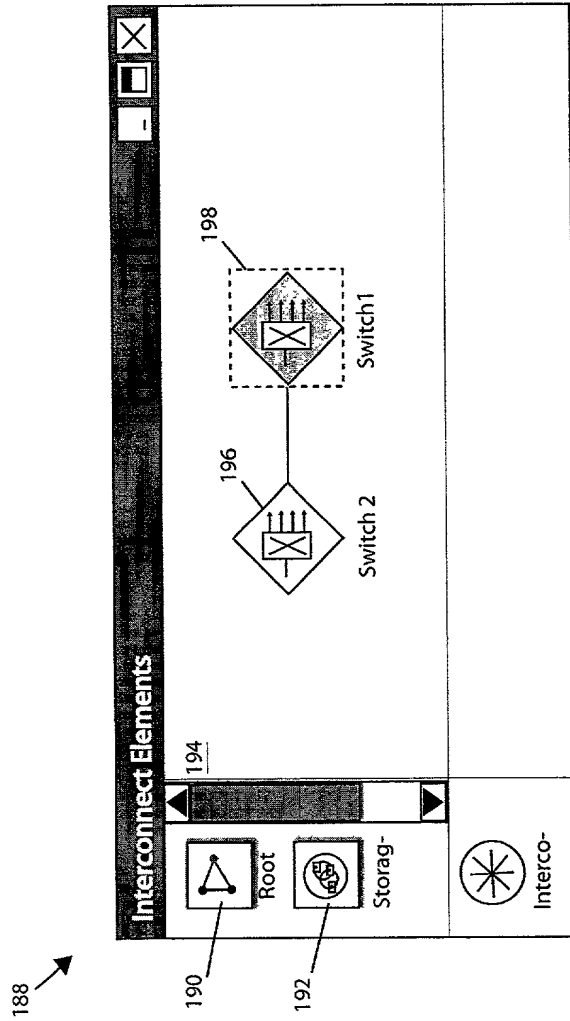 


Figure 30

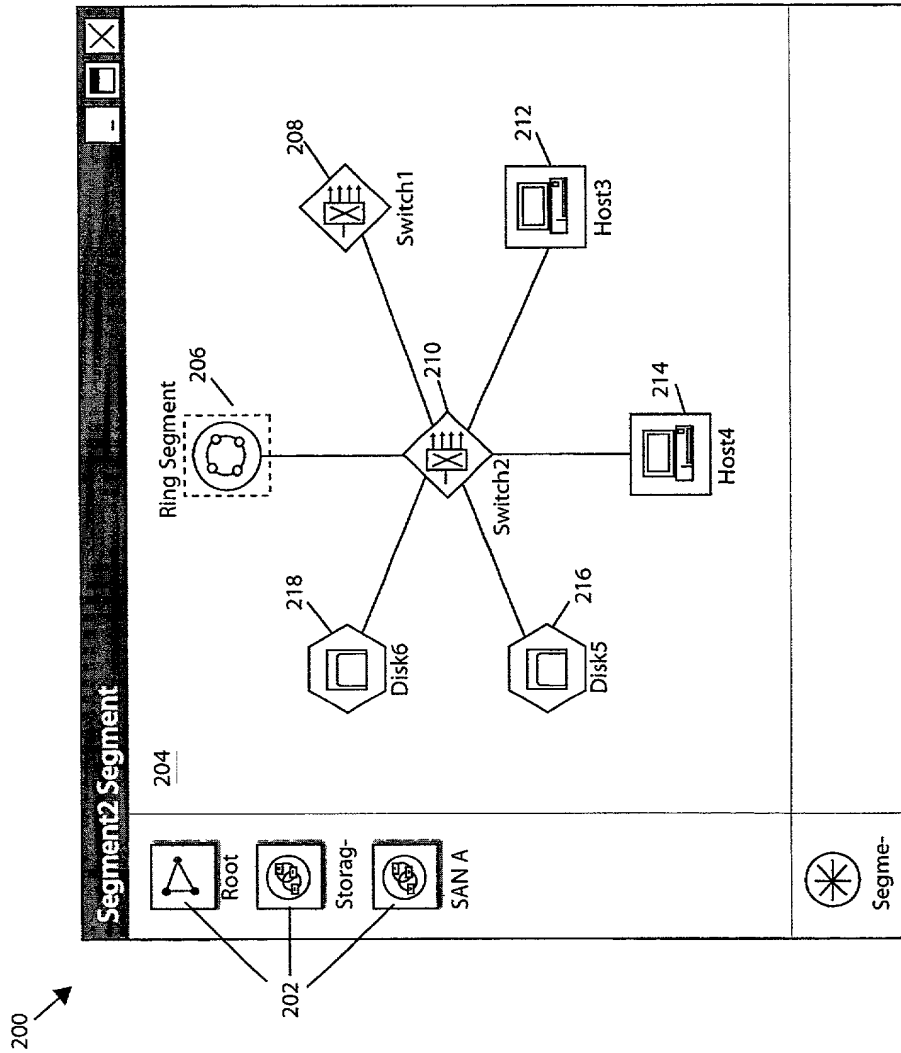 


Figure 31

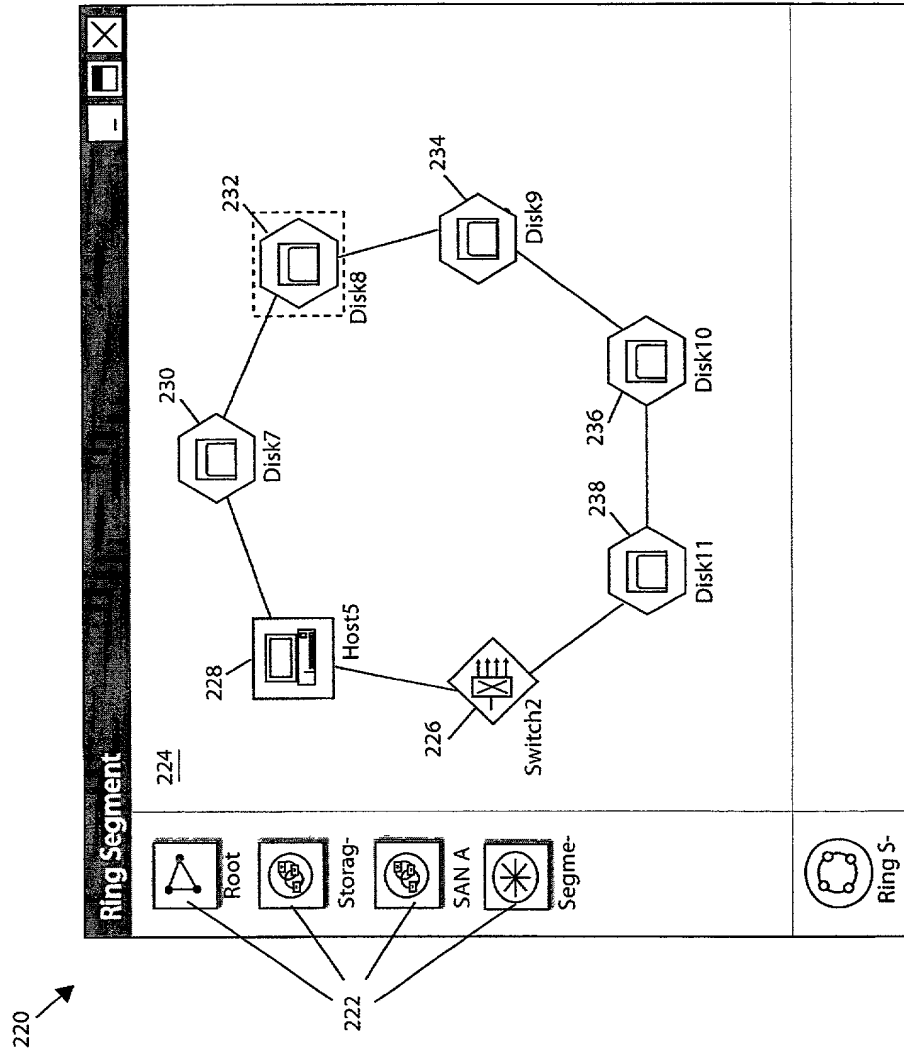 


Figure 32

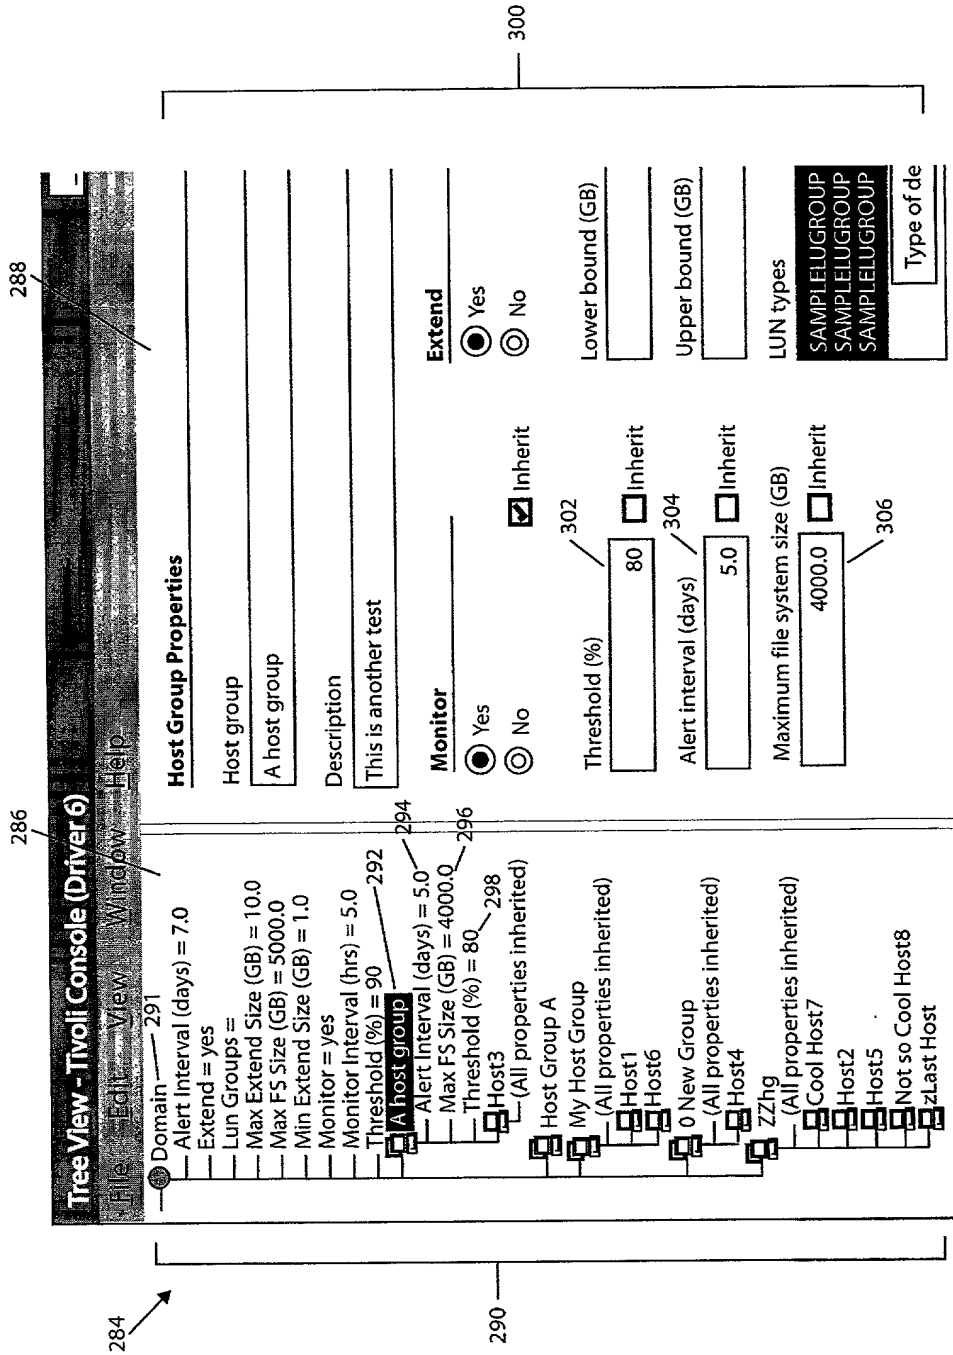 
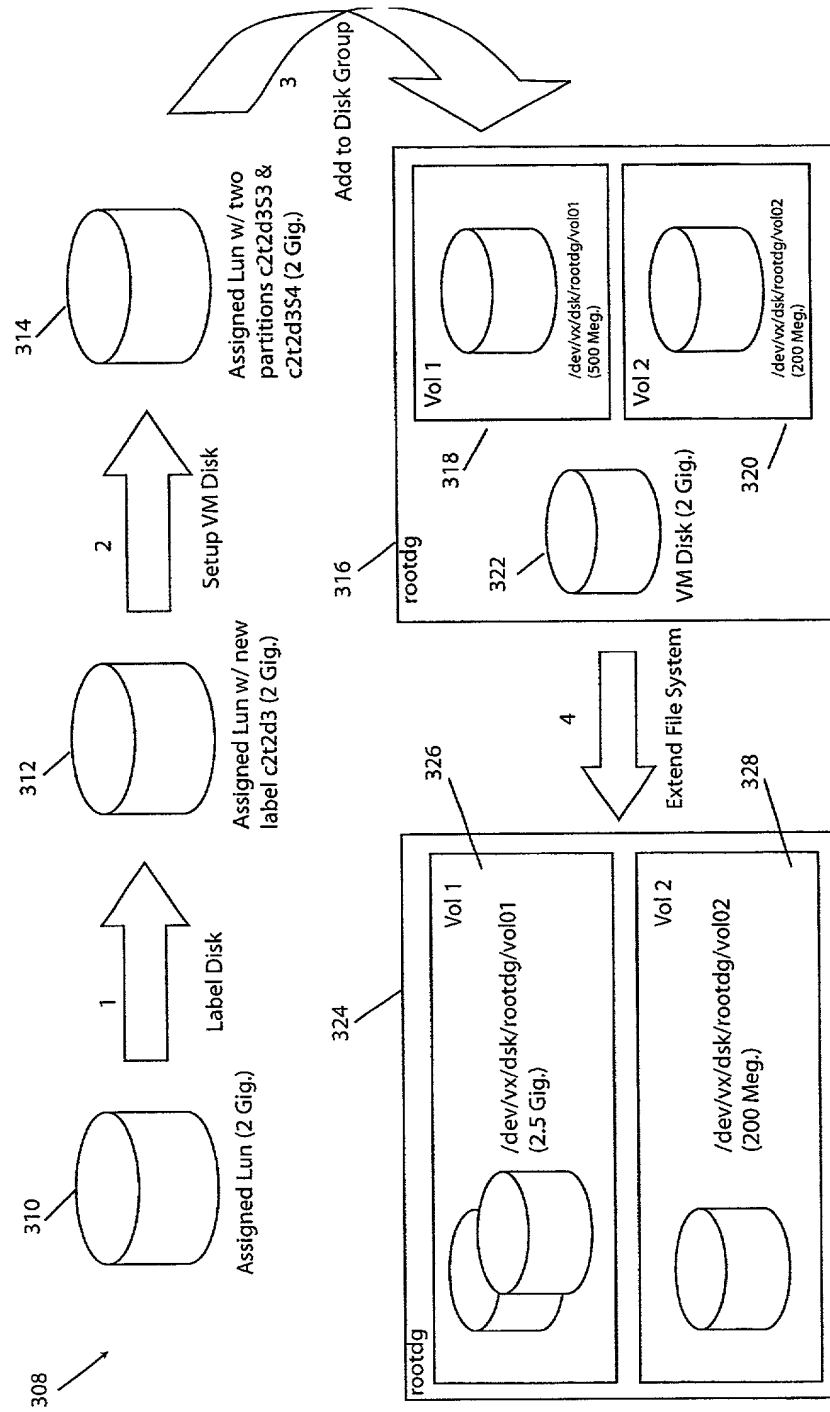 


Figure 34

Figure 35



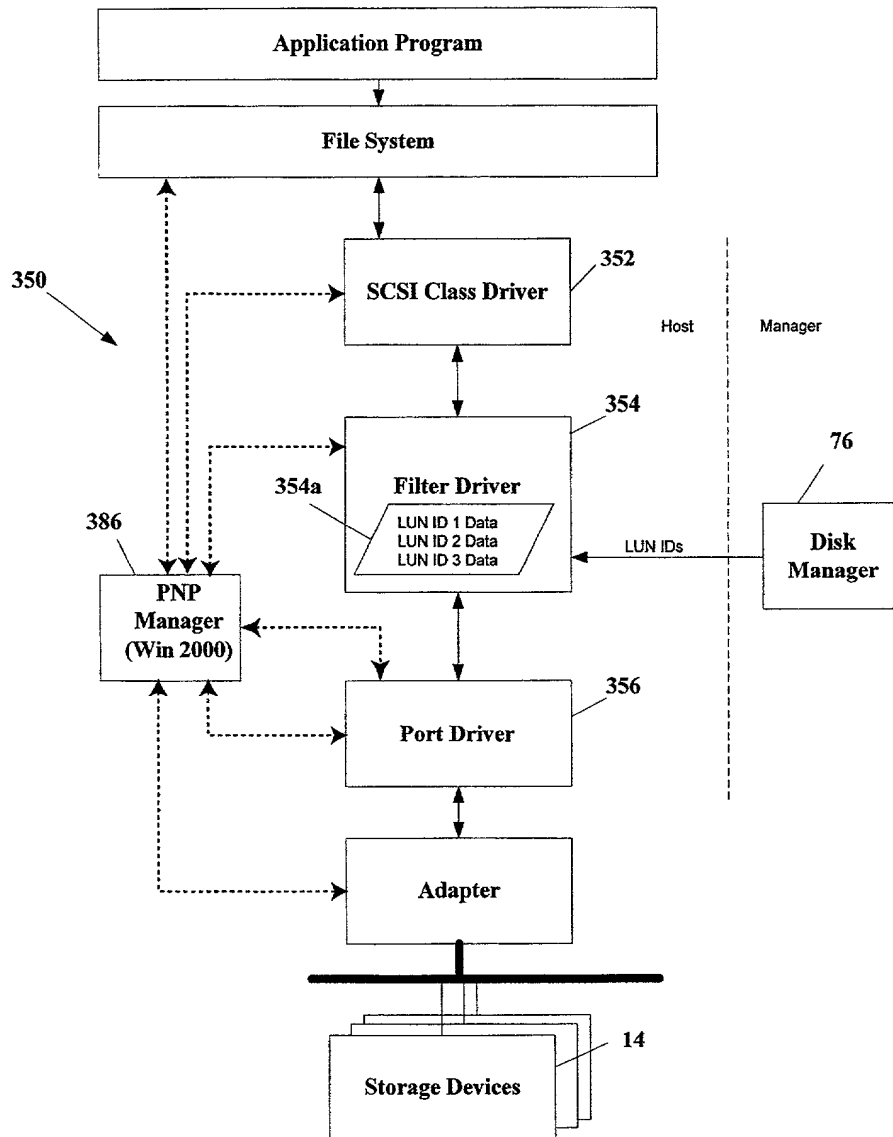 
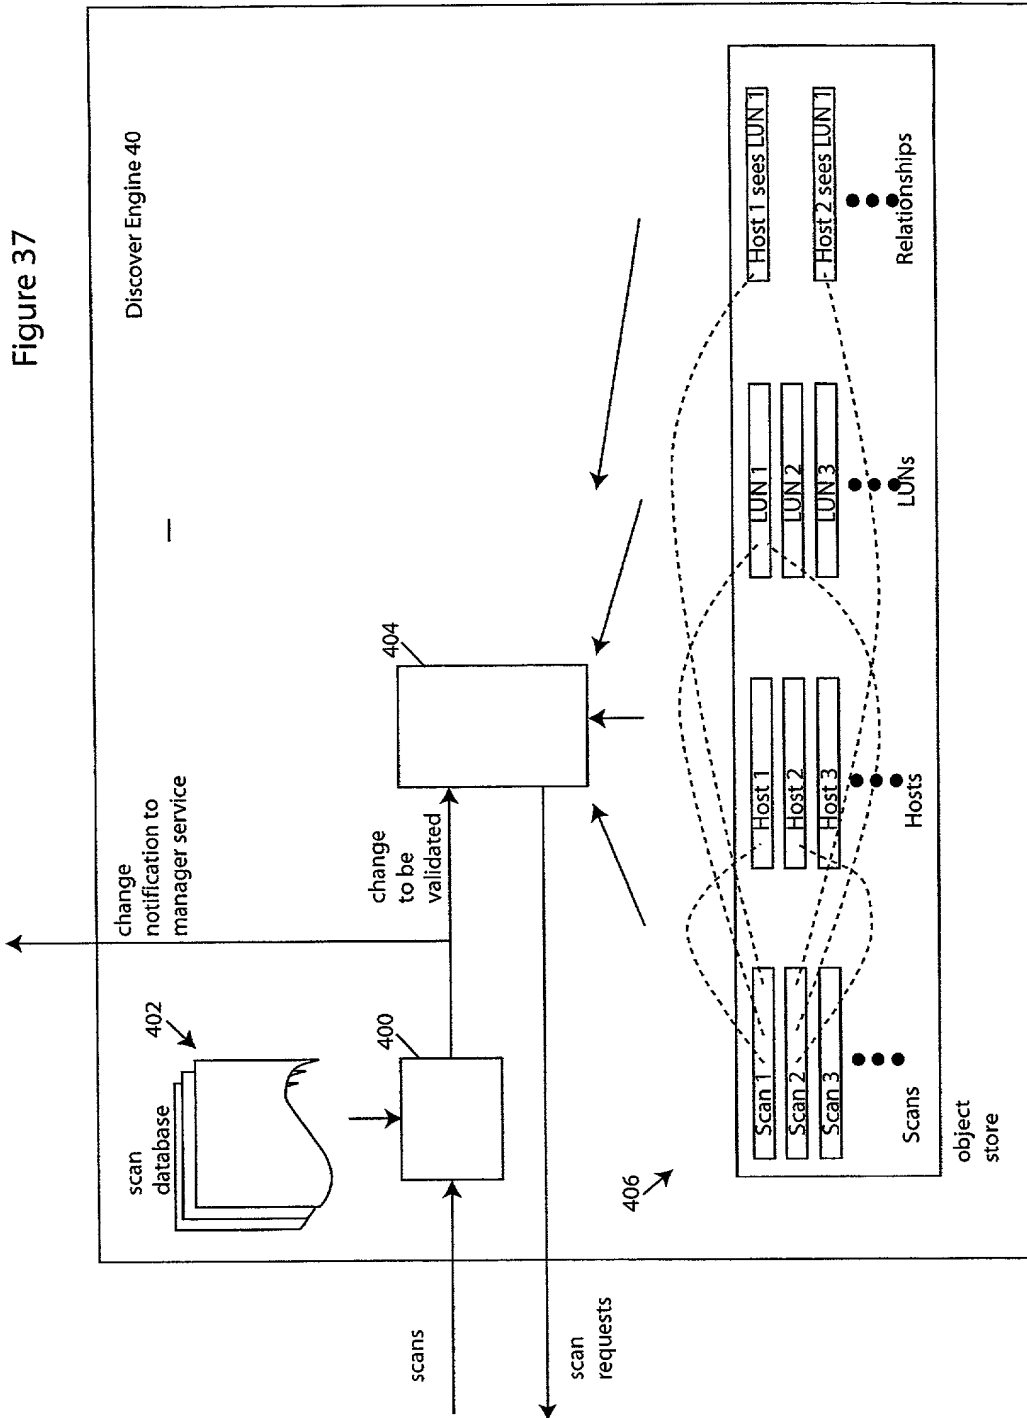 


FIGURE 36

Figure 37



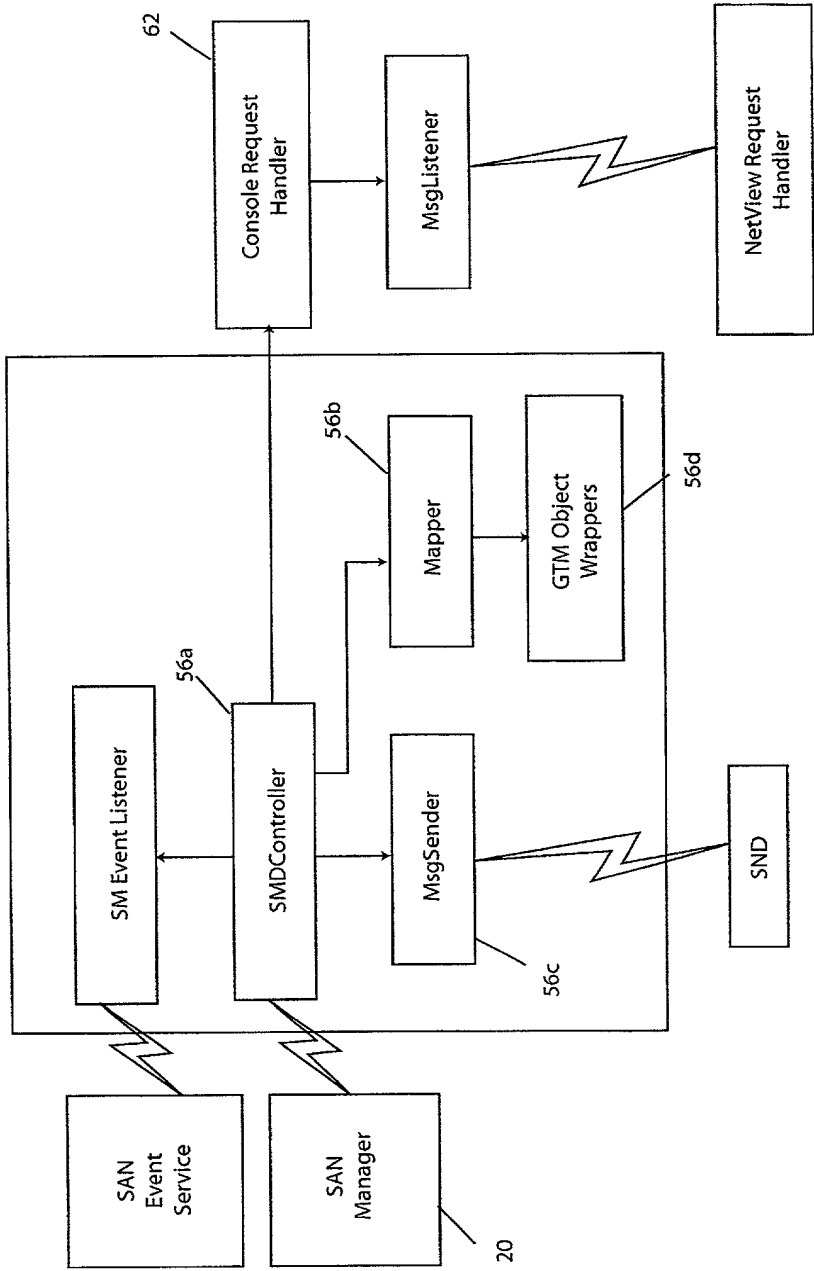 


Figure 38

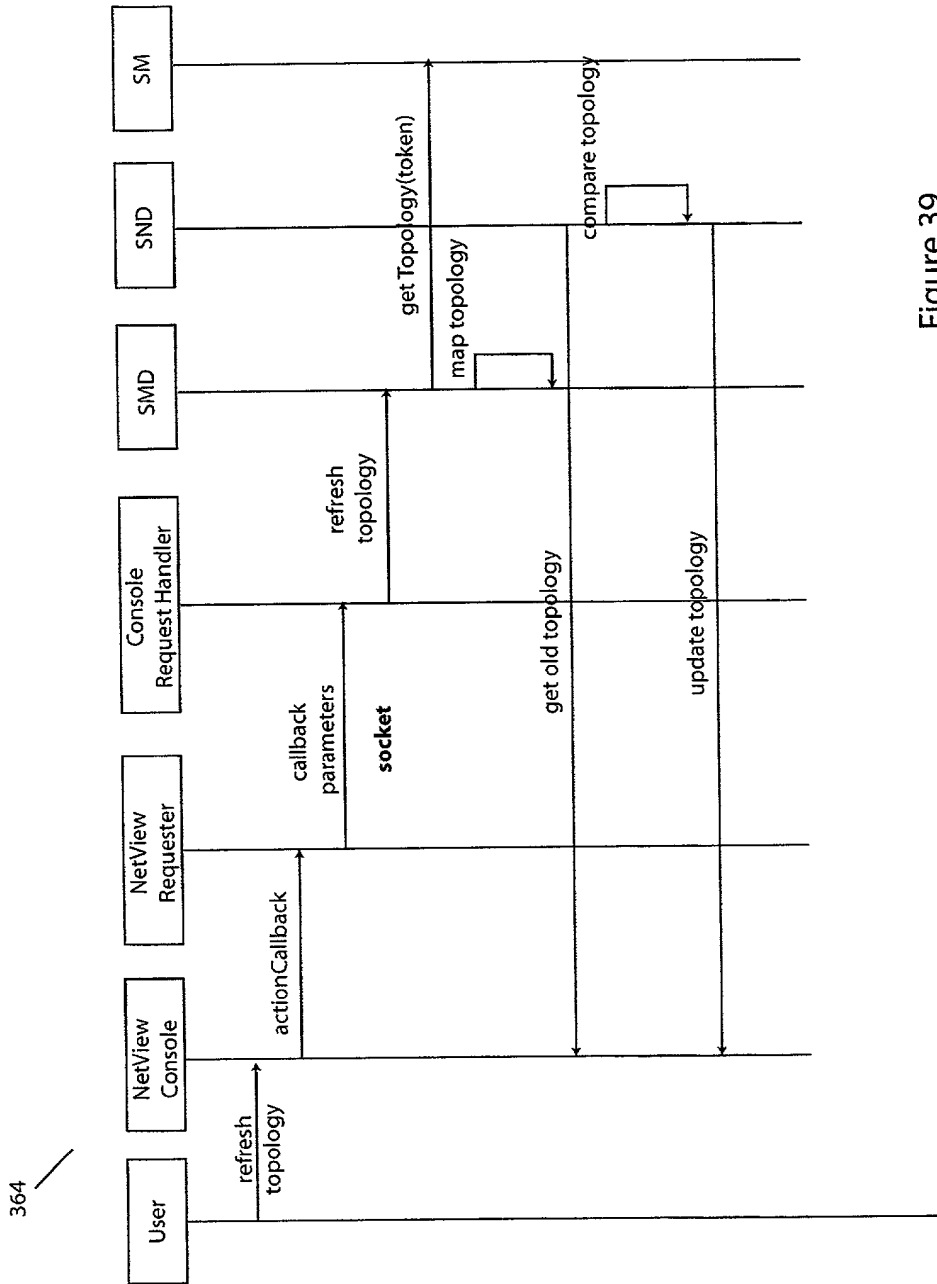 


Figure 39

 
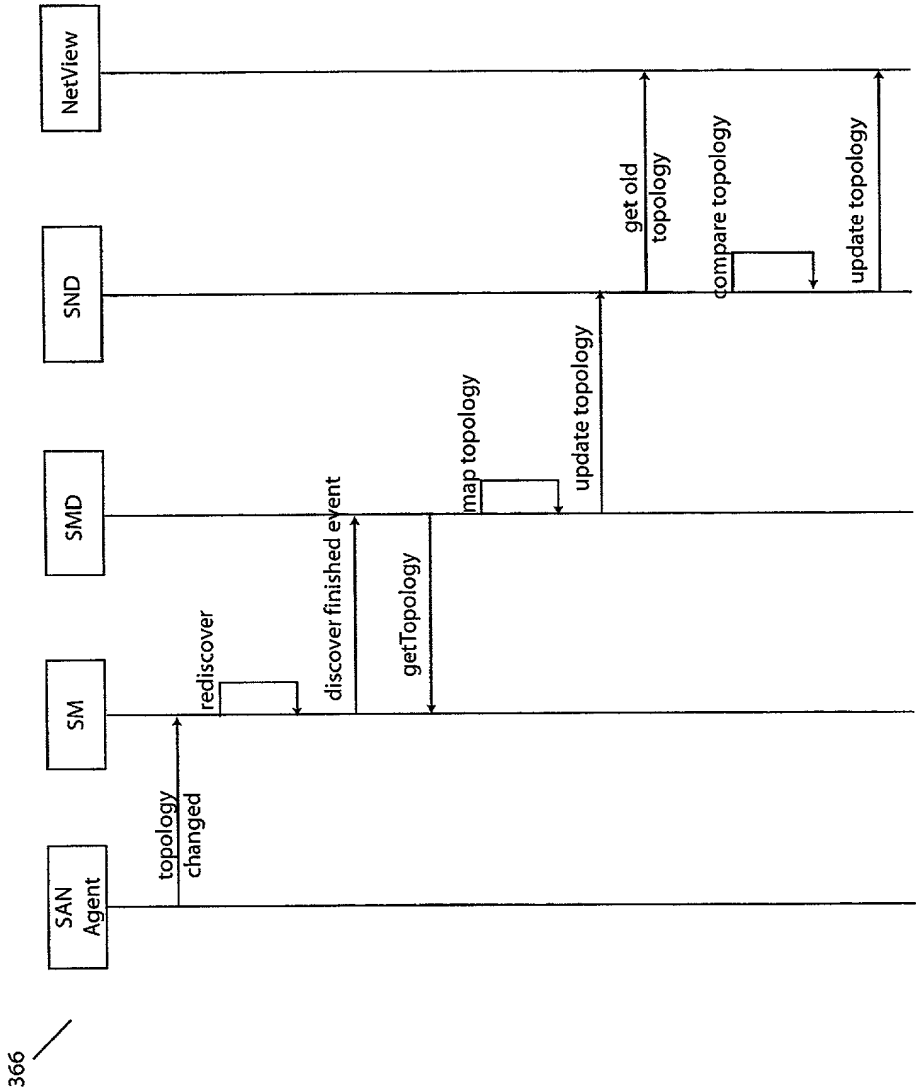 


Figure 40

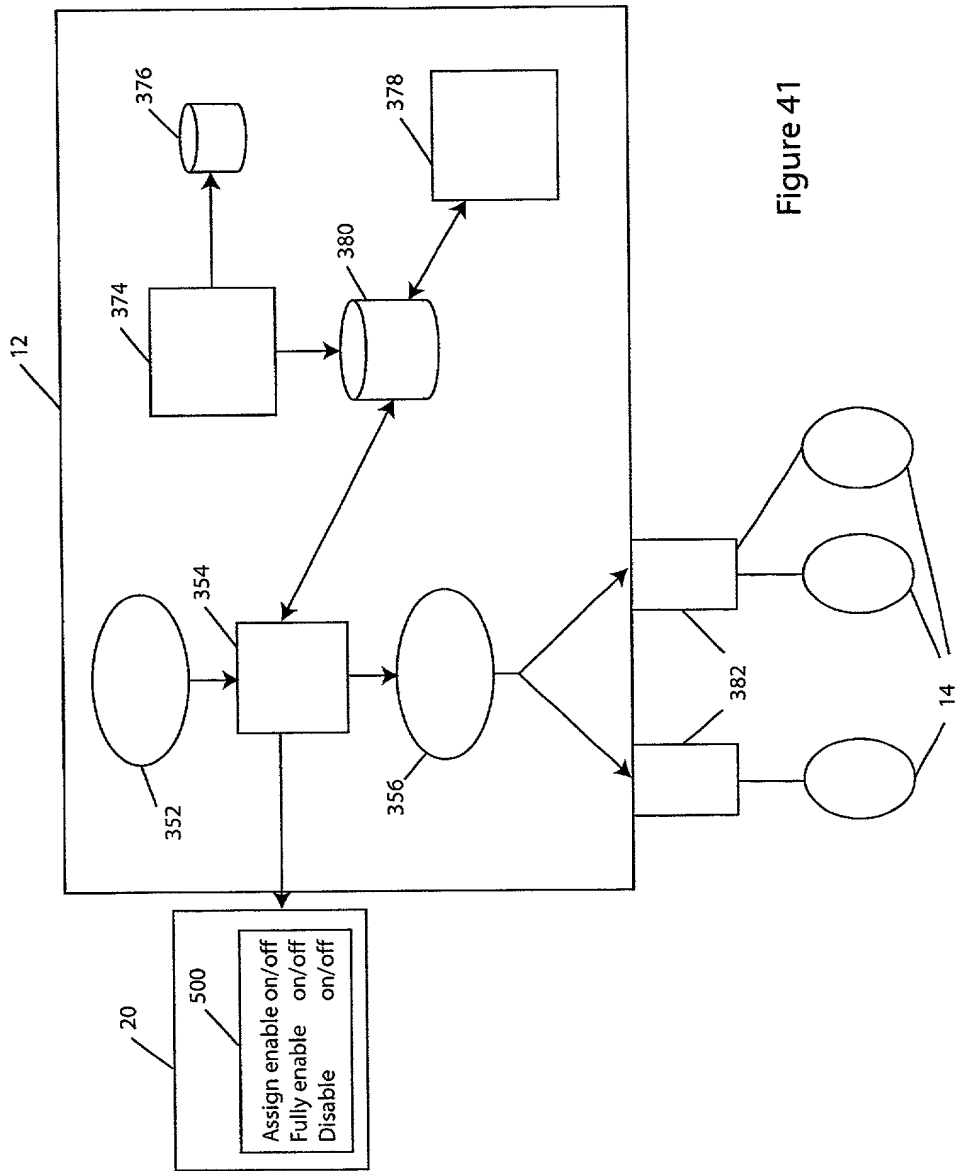

U.S. Express Mail Label No. EL 835 825 645 US

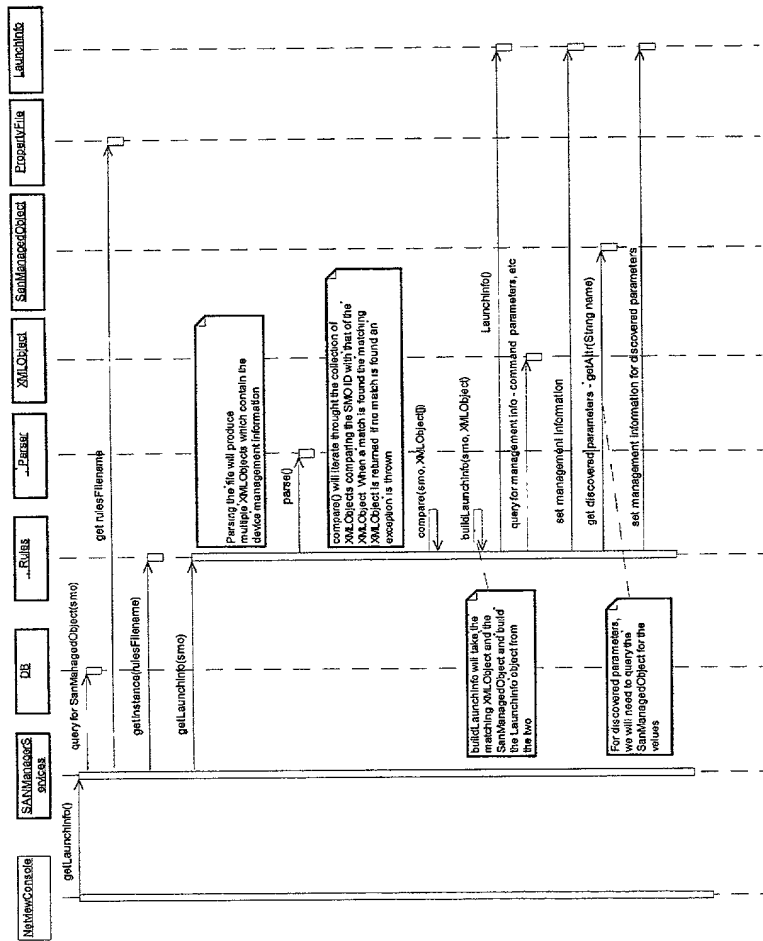 


Figure 42

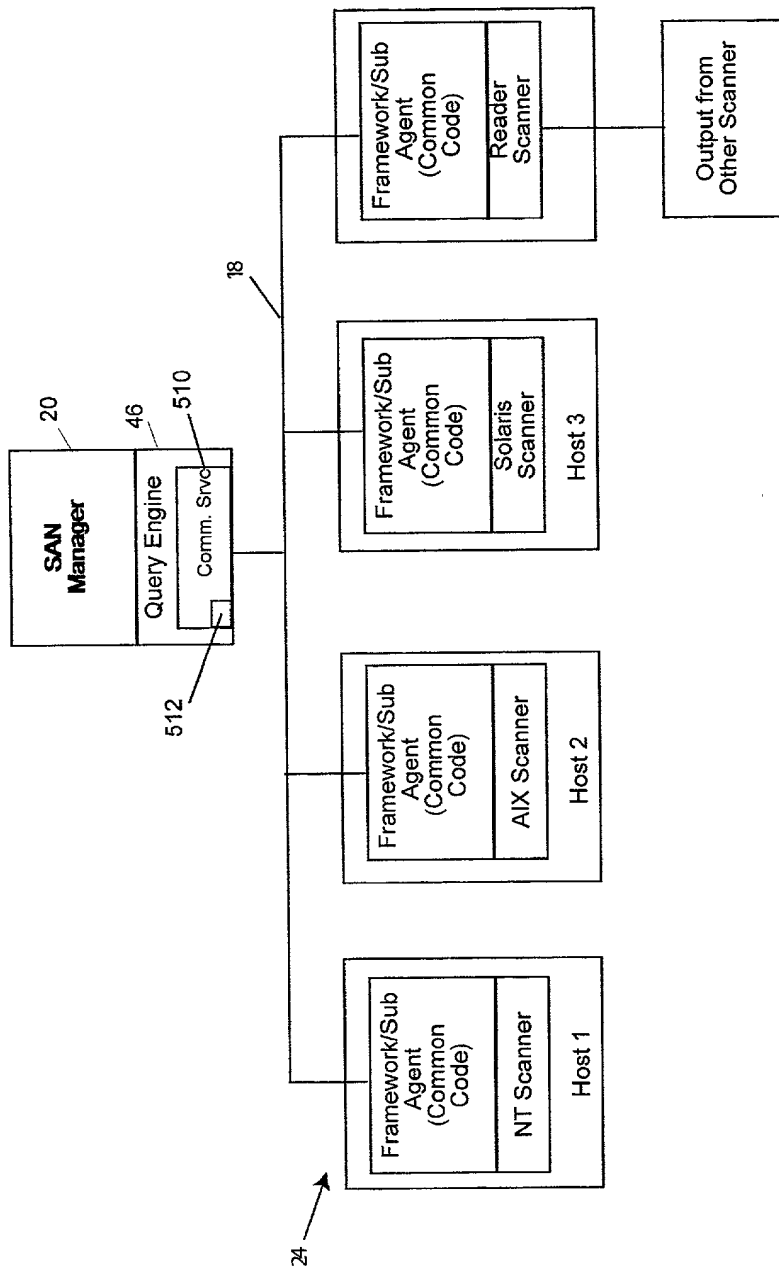 


Figure 43